


READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and should be installed by a qualified automotive technician.

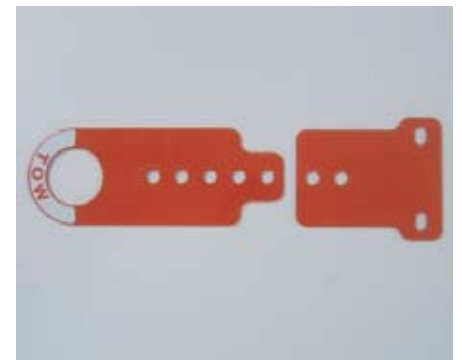

Mounts to factory bumper shock attachment point on all 1974-1989 911's using factory hardware. Although this is a bolt on unit for 911 based cars it can be used for several custom applications.

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately.

Parts List

- (2) Hex Head Cap Screws - 7/16-14 X1" - MC92865A669
- (2) Hex Nut - 7/16-14 - MC95462A032
- (2) Lock Washer- MC91102A765
- (2) Tow Stickers