


## READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and should be installed by a qualified automotive technician.

### Parts List:

- (2) Tie Down/Jack Plates
- (2) 1/2 -13 x 1" Bolts MC 92865A712
- (2) 1/2 SS Washer MC 98017A209

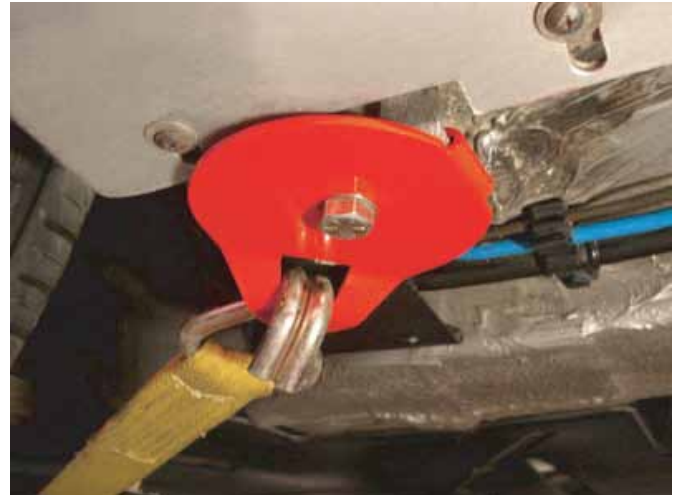

To install, unscrew bolt and slide the tab into the jacking block underneath the car. Make sure the tie downs are pointed towards the opposite side front wheel. Reinstall bolt

NOTE: It may be necessary to unscrew and lower the rear of the plastic undertray for installation on some cars. Once the tie down is in place, reinstall undertray screws.