

## Smugglers Box Cover

### READ BEFORE INSTALLATION


The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Do to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

1. Remove factory smuggler's box cover by removing the (2) screws on each hinge.
  2. Install Rennline smuggler's box cover using the supplied stainless steel screws and hinges.
  3. Make certain that there is plenty of clearance around all power terminals, adjust as needed.
- Note: If side to side adjustment is required, loosening the screws, reposition cover, then tighten screws.


Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately.

#### Parts List

- (2) #10x.75" S/S Phil Pan Screws - MC92470A245
- (2) 10/32 X .375" S/S Button Head Cap Screws - MC92949A263
- (2) 10/32 Nylon Lock Nuts - MC90101A225
- (1) Hinges
- (1) Smugglers Box Cover

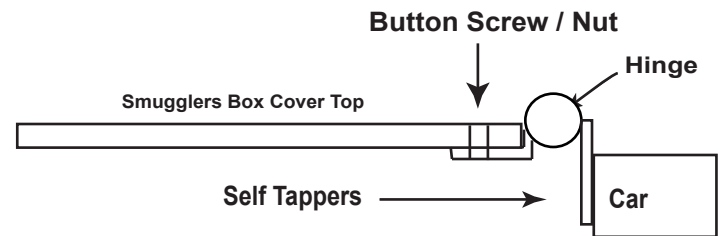


**Exposed Cover**

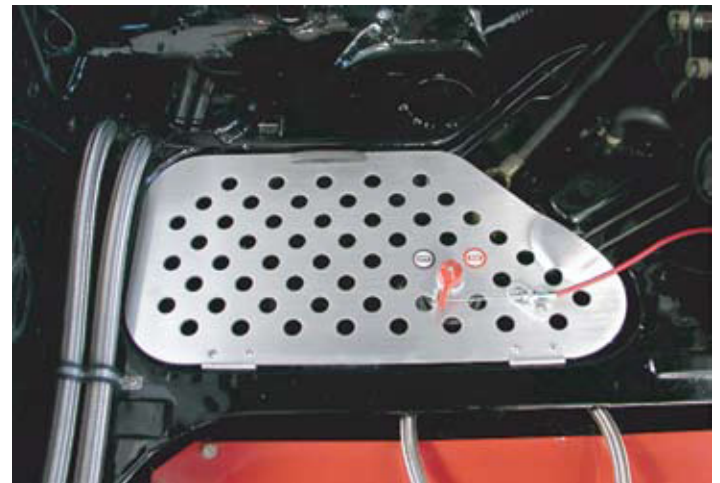

**Concealed Cover**

Here's a few photos of available options

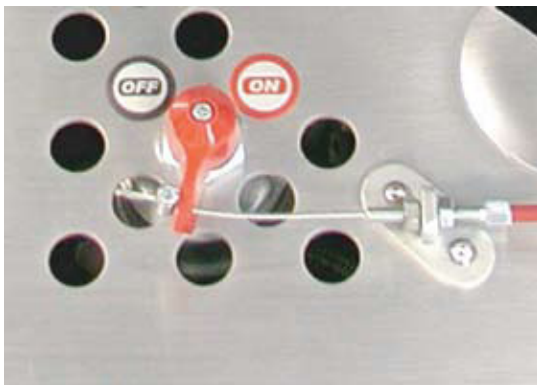

**Integrated Kill Switch**



**Battery Relocation Cradle**



**Remote kill switch pull**