



Driven to improve excellence.

Order Online: WWW.RENNLINE.COM

EM Sales@rennline.com

PH 802.655.5311

FX 802-655-6283

"Carrera GT" Style Alum. Floorboard

996/997/Boxster/Cayman
W/O Bose System

1. Remove factory floor mat from car.
2. Thoroughly clean carpet removing any dirt or grease.
3. Allow carpet to completely dry before proceeding with installation.
4. Place mounting plate into car to determine installation location. Once you are satisfied with its location, place tape around the perimeter so that you can relocate the mounting plate during final installation. (See Figure 1)
5. Remove clear protective coating from Velcro and mount backer plate into original location that is defined by tape. (See Figure 1)
6. Firmly press backer plate against carpet to insure a good adhesion. This adhesive gets stronger with time, so allow a few days before trying to remove this unit for any reason.
7. Attach face panel to mounting plate using the supplied stainless steel button head screws. (See Figure 2)
8. Pull bottom edge of face plate out and slide floormat or Track Mat into position.

Note: If you are installing this into a track car or a car that requires a permanent installation, Rennline has drilled holes to help with this process. Special brackets or hardware may be required for your specific needs that are not included with this kit.

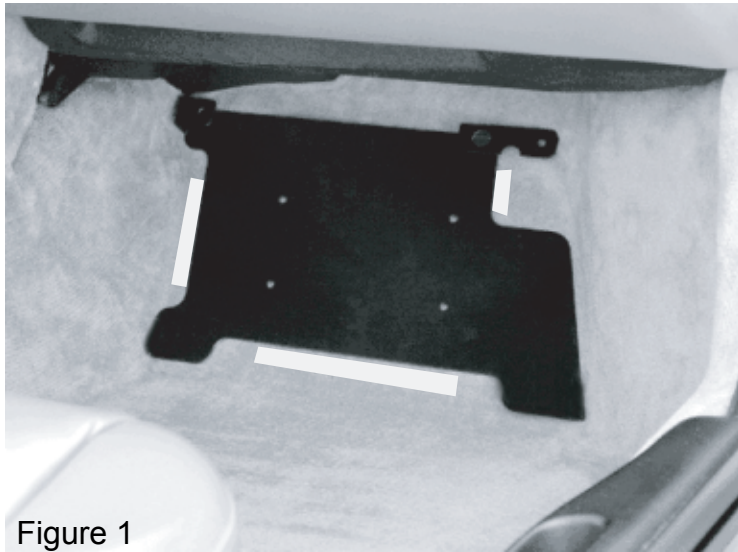


Figure 1

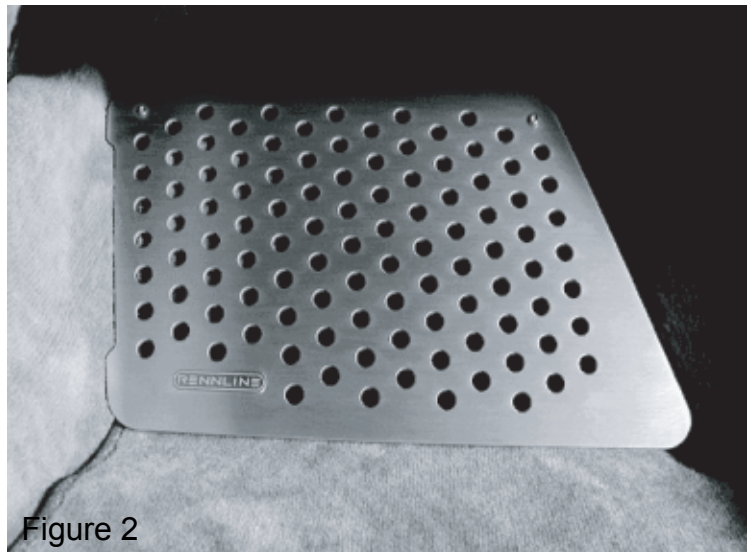


Figure 2

Check to make sure you that have all parts listed prior to installation. If anything is missing contact us immediately.

Parts List

- (2) 10/32x1/2" Button head S/S screws
- (1) Floorboard face plate (Black or Silver)
- (1) Mounting plate (Black)
 - (1) Velcro (9"+ 12")
 - (2) 10/32 nutserts - MC95105A135
 - (2) rubber bumpers - MC9723K85

P/N - F16* (S, B)



Shown with Rennline Track Mat