



Driven to improve excellence.

Order Online: [WWW.RENNLINE.COM](http://WWW.RENNLINE.COM)

EM Sales@rennline.com

PH 802.893.7311

FX 802-893-7366

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Do to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and

Passenger Side Aluminum Floorboard

964/993 All

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately.

- Parts List
- (1) Rubber Bumper - MC8884T29
  - (2) Embossed SS Washer - MC90313A104
  - (1) 10-32 x 1.25" Button Head Screw - MC92949A272
  - (3) 10-32 x .5" Button Head Screw - MC92949A265
  - (3) Self Drilling Screws - MC92364A153

**Step 1:** Remove Factory Floor mat

**Step 2:** For cars with no carpet: assemble the bumper assembly on the center hole in the bottom row of the perforation pattern. The order from top to bottom should be screw, embossed washer, floorboard, embossed washer, rubber bumper. (See photo 1)

**Step 3:** Place Floorboard into car place and shim the bottom up about 1/2" making sure it sits level.(see photo 2)

**Step 4:** If you have any reason to believe the fuel tank or fuel lines have been moved or tampered with remove the inspection cover under the car as shown in image 3, and check to make sure that there is adequate clearance between fuel lines/tank and the firewall.

**Step 5:** Screw in the (3) self drilling screws through the center of the slotted holes in the backing plate. This will allow for adjustment after installation.

These three holes are shown in image 4 and can be reached through the perforated holes in the floorboard. Note: It helps to use a long bit in a drill to avoid the drill hitting the floorboard surface.

**Step 6:** If you are using the factory floor mat, you may need to remove the aluminum floorboard using the (2) 10-32 screws, slide the floormat over the backing plate, and then reattach the aluminum floorboard.

**Step 7:** Enjoy your new Rennline product.

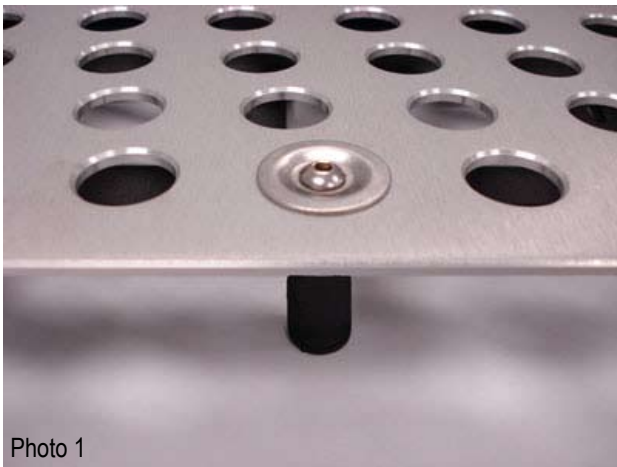


Photo 1



Photo 3

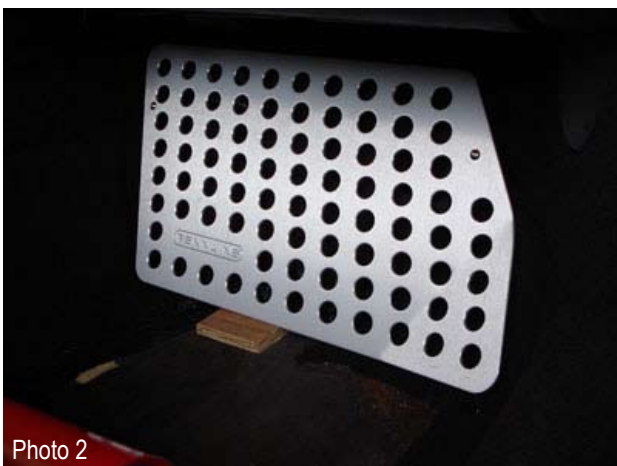


Photo 2

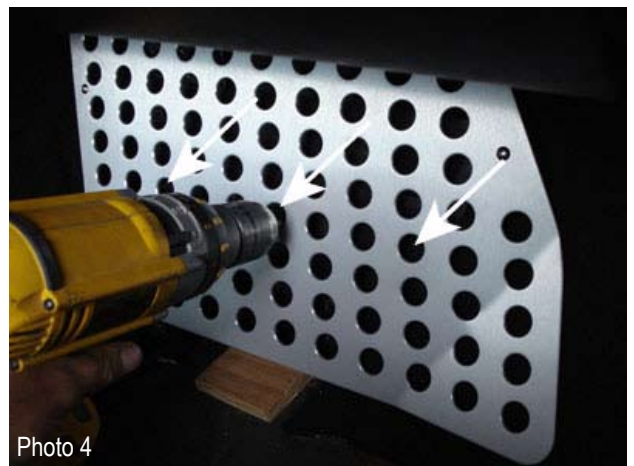


Photo 4