

Porsche Fire Extinguisher Mount - Carbon Lightweight Bucket Seats

981 GT4, 991 GT2, 991 GT3

Check to make sure you that have all parts listed prior to installation. If anything is missing contact us immediately.


Parts List:

- (3) MC9765A384 - M8x20 Flanged Button Head
- (3) MC93625A300 - M8 Nyloc Nut
- (3) MC93475A270 - M8 Washer

- (4) MC92095A481 - M5x18 Flanged Button Head
- (4) MC93625A200 - M5 Nyloc Nut
- (4) MC93475A240 - M5 Washer

Step 1: With the seat out of the car, lay it on its back and with a 10mm socket, remove the wire terminal with integrated nut.

Step 2: Pull back the seat cushion and locate the 3 other holes in the seat bucket. They may have wire clips installed in which case, press them out. Pierce the felt at the 3 holes and install the supplied M8 screws.

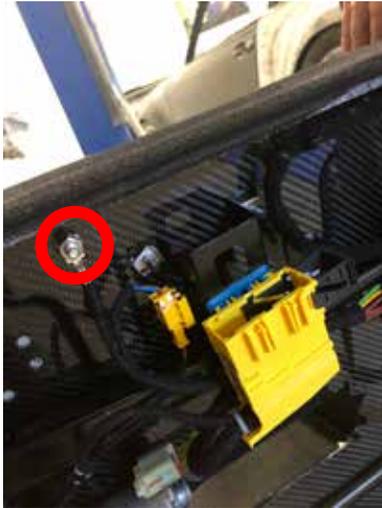

Step 3: Install Rennline Fire extinguisher mount using the supplied M8 nuts and washers. Reinstall wire terminal with integrated nut.

Step 4: Install Fire extinguisher bracket and position it off center to the door side of the car as shown below.

