

Solid Engine/Transmission Mounts


911 Engine Mounts (1965-89) Transmission Mounts (72- 1987)

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation.
If anything is missing contact us immediately.

- (2) Motor Mounts
- (4) MS M8X45mm SS Button Head Screw
- (4) MS M8 SS Nyloc Nut
- (8) M8 Washer MC93475A270
- (2) M12x1.5 x70mm Bolt

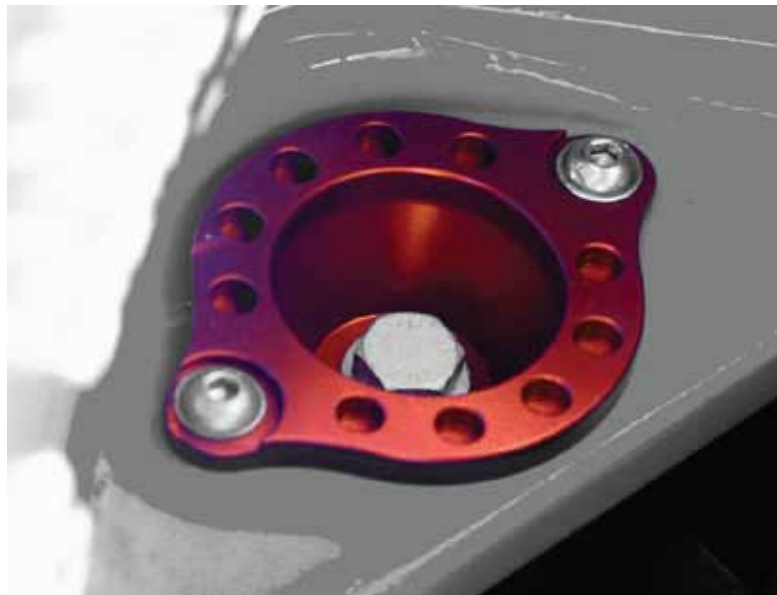

1. Using a jack, support the engine or transmission depending on the application.
2. Remove factory mounts and replace with Rennline units using supplied hardware.

Note: We recommend that you install and replace one side at a time.