

## READ BEFORE INSTALLATION


The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and should be installed by a qualified automotive technician.

### Parts List:

- |                             |                                     |
|-----------------------------|-------------------------------------|
| (2) Engine Mounts           | (2) Top Yellow (Street) Bushings    |
| (2) M18 Bases               | (2) Bottom Yellow (Street) Bushings |
| (2) M18 Bodies              | (2) Top Blue (Sport) Bushings       |
| (2) M18 Hangers             | (2) Bottom Blue (Sport) Bushings    |
| (2) M18 Nut Bushings        | (2) Top Red (Race) Bushings         |
| (2) 134mm 12mm to 14mm stud | (2) Bottom Red (Race Bushings)      |
| (2) 103mm 12mm to 14mm stud | (2) M12x1.5 Nuts - 120FNHFSZ/D6923  |

### Stud Installation:

To install the stud, install the two 12mm nuts on the smaller diameter of the threads. Using two 19mm wrenches, tighten the nuts together. Screw Stud into M18\_Hanger by hand using red loctite on the M14 threads, and then torque to 30ft/lbs using the outermost nut.

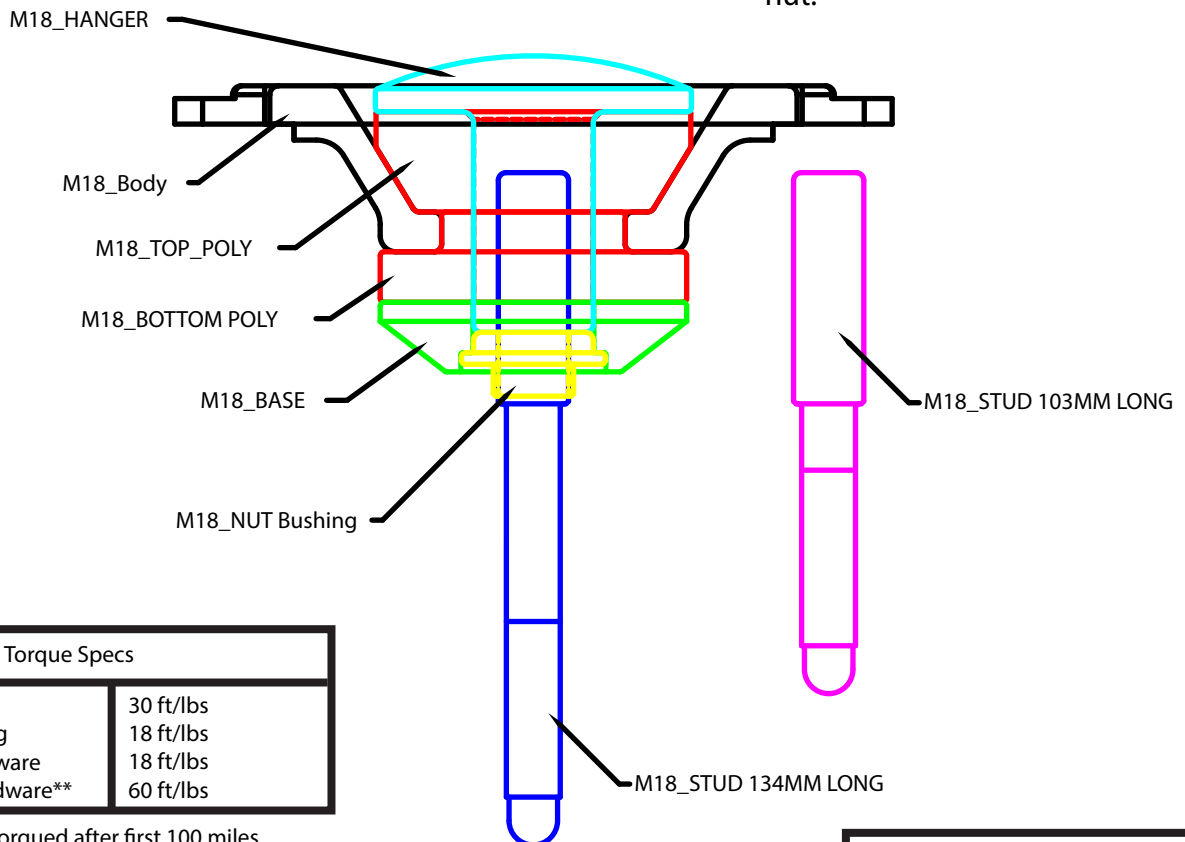

Torque Specs	
Stud	30 ft/lbs
M18_Nut Bushing	18 ft/lbs
Factory M8 Hardware	18 ft/lbs
Factory M12 Hardware**	60 ft/lbs

\*\*Nut must be retorqued after first 100 miles

Stud Fitments	
996/997	134mm stud
964/993	103mm stud
986/987	103mm stud

Insert Durometer	
Yellow	75A
Blue	85A
Red	95A