


## Installation Instructions



## STEP 1 - REMOVE OIL FILTER POST

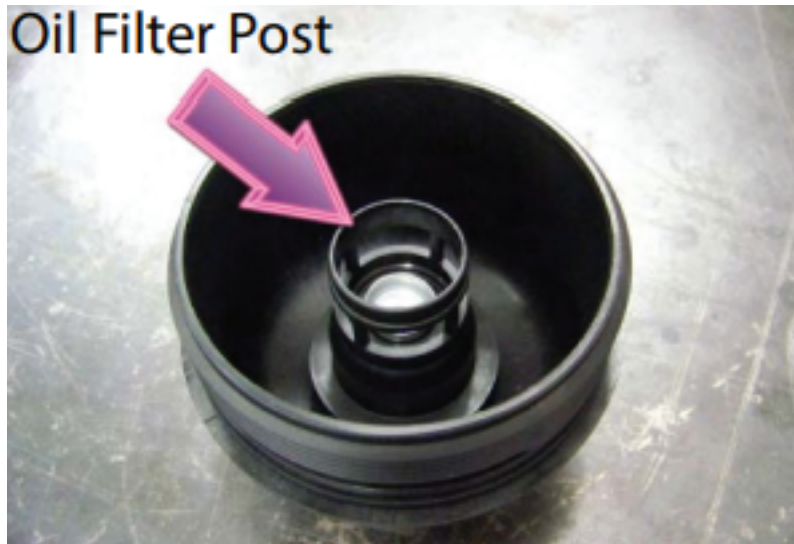

Start this installation by removing the oil filter post from the factory oil filter housing. This post allows adequate flow from the filter housing into the crank case and is required on your new Rennline filter housing. To remove the post push the top of the post towards the outer rim of the housing. The post will make an audible pop when it is disengaged from the base.



## STEP 2 - RE-INSTALL OIL FILTER POST



To install the post, center the post on the mounting flange in your new Renline Oil Filter Housing and press firmly. The post will snap into place when seated properly and spin freely. Your Renline Billet Oil Filter Housing is now ready for installation. Refer to factory Porsche manuals for the appropriate oil filter and gasket specifications.

