



Order Online: WWW.RENNLINE.COM

EM Sales@rennline.com

PH 802.893.7366

FX 802-893-7311


Driven to improve excellence.

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Do to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

INSTALLATION INSTRUCTIONS FOR DEAD PEDAL

Porsche 911,912,930 (1965-1989) Coupe, 914 All

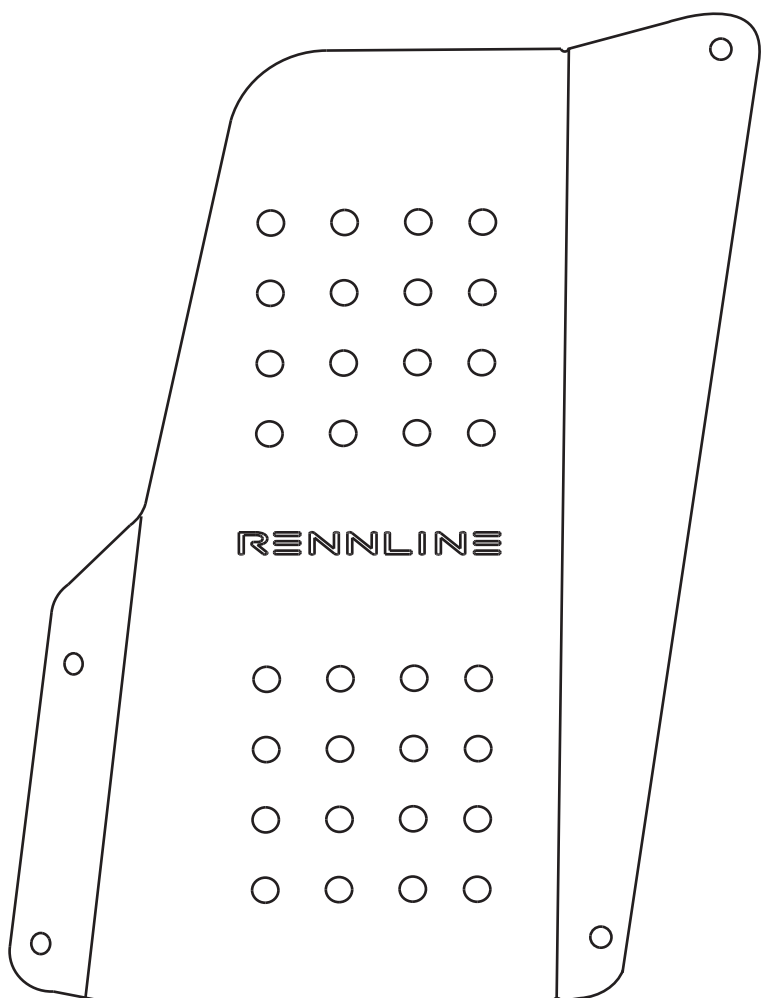

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately.

Parts List

- (4) 8/32x5/8" Black S/S Truss Head Machine Screw - MC91772A196
- (4) #8 S/S nylon nuts - MC90101A009
- (4) #8 S/S washers - MC98017A625
- (1) Dead Pedal (P11, P51, P52)

A. Place Rennline dead pedal in mounting location.

B. Drill the 2 front mounting holes and 2 back(1 on 914's) mounting holes through the inner fender well using a 3/16 drill bit. Make sure that the tires are turned toward the passengers side to insure that the drill bit does not come in contact with the tire.

C. Attach dead pedal using the supplied bolts, nuts and washers.

Note: Due to variations in tire size and suspension setups, always check the clearance between the tire and the dead pedal bolts in the fender well. Make adjustments as needed.