

### Cayenne Dead Pedal (Tape Installation)

This dead pedal has been designed for 2 methods of installation. (1) is simply a double sided tape installation (2) requires drilling and screws. We recommend (2) for vehicles that may see driving conditions that are a bit more extreme then normal street activity.

Note: your dead pedal may look different then the one used in these instruction. Rennline offers 3 different pedal designs for this automobile, but installation it the same for all.

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately.

#### Parts List

(3) #10X3/4" S/S Pan Screw - MC92470A245



1. Clean the factory vinyl pad using a cleaner that will remove any grease or contaminates that may effect the performance of the supplied tape.
- 2) Remove the protective coating on the tape. Slide the dead pedal mounting fingers under the kick panel edge. Press dead pedal firmly against vinyl pad to help secure tape.
- 3). Enjoy your new Rennline Product.

**Cayenne Dead Pedal (Tape Installation)**




Remove sill plate cover by prying it up with a suitable tool.



Remove (2) bolts and lift up the front half of sill plate.



Remove hood release handle by sliding the lock clip toward the front of vehicle. See figure 5

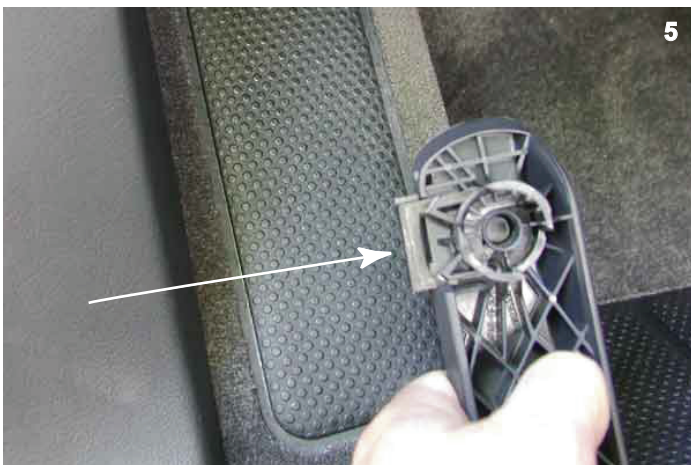

View of lock clip.



Unclip upper and lower lining by prying them toward rear of car. In order to reduce the unclipping forces, the removal process must take place at the accessible connection points using a suitable tool.




**Cayenne Dead Pedal (Tape Installation)**




View with linings removed.



Put pedal in position as shown.

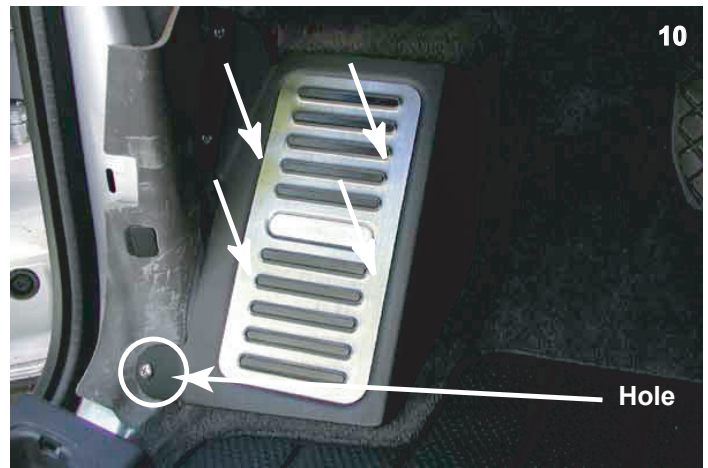

Apply downward force to dead pedal and predrill hole as shown using a 1/8 bit. Install screw.

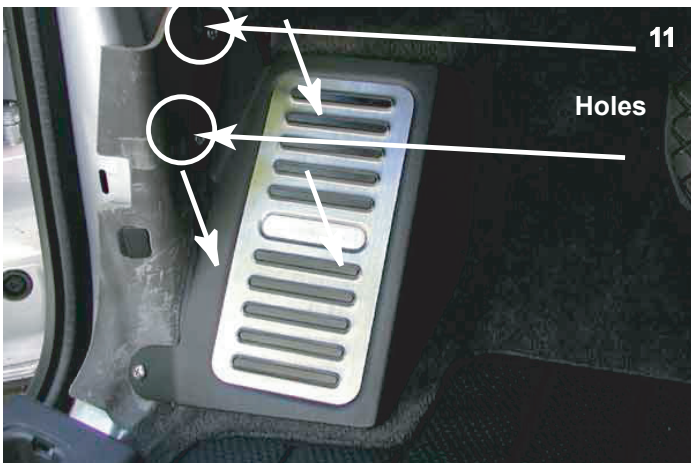

Continue to apply down force and predrill the two holes shown using a 1/8 bit. Install screws.



Reinstall all panels in reverse order.