

Dead Pedal

986/987/996/997

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation. If anything is missing contact us immediately.

- (1) Deal Pedal
- (2) #8 X 5/8 Truss Head Screws - MC93406A196


P/N 59C Only

1. Place the factory crest into the recessed area of the dead pedal with the post sticking through the hole.
 2. Secure the crest from the back of the pedal using the push nut that was supplied with your factory crest.
- Note: If your factory crest was not purchased through Rennline, it may be necessary to shorten the post so that it does not interfere with the pedal sitting flat against the factory plastic unit. You may also need to purchase the push nut if it was not supplied with your crest.

P/N 59D Only

1. Make sure your pedal is clean and free of any contaminates such as Armor All.
2. Remove the backing paper from the factory dome decal and place it in the recessed area of your Rennline pedal.
3. Press firmly over the entire surface of the decal.


996/986

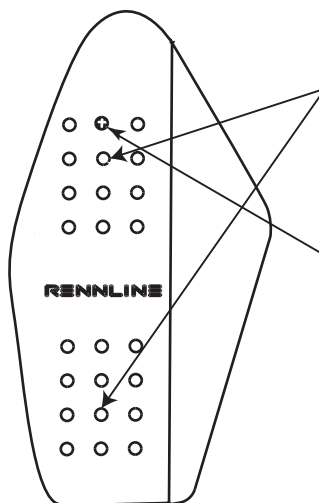

- A. Remove factory plastic dead pedal.
- B. Install rubber grips into these 2 locations. (Note: Run rubber grip under hot water to soften rubber prior to pressing into holes.)
- C. Install dead pedal using one of the supplied black screws into the factory mounting hole.

Note: When installing in a 1999-2004 996/986 it may be necessary to slide the bottom left corner of dead pedal behind the carpet kick panel.

997/987

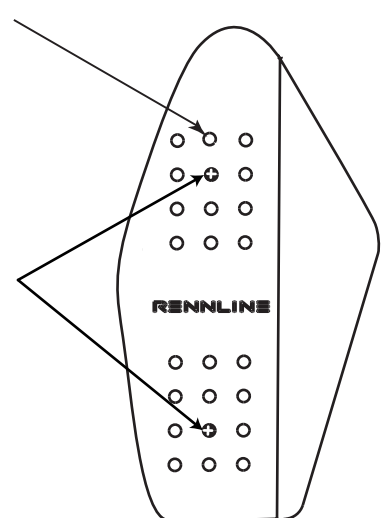

- A. Install rubber grip into this location. (Note: Run rubber grip under hot water to soften rubber prior to pressing into holes.)
- B. Place aluminum dead pedal over the top of factory unit.
- C. Drill (2) 1/16" holes into factory plastic pedal cover and install using the supplied black screws.