

ExactFit - Magnetic Phone Mount

Porsche 944

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.



Part List:

(1) Mounting Bracket - P/N - PM23

(1) P/N - PM01

- Aluminum Ball

- Magnetic Pad Assembly

- Steel pads

(1) Button Head Socket Cap Screw - 10/32 x .5" - MC97763A232

(1) External-Tooth Lock Washer #10 - MC95584A205

1. Install the aluminum ball onto the metal bracket as shown using the supplied screw and lock-washer.
2. Remove the three Phillips screws from above the gauge cluster. (Photo 1)
3. Remove the three Phillips screws from around the center air vents. (Photo 2)
4. Remove the instrument cluster trim, place the phone mount bracket over the mounting hole as shown. (Photo 3)
5. Reinstall all the instrument cluster trim without moving the phone mount bracket off the mounting hole and reinstall the six Phillips screws in reverse order of disassembly. (Photo 4)
6. Attach the phone to your mount.
7. Enjoy your new Rennline product.

Photo 1



Photo 2

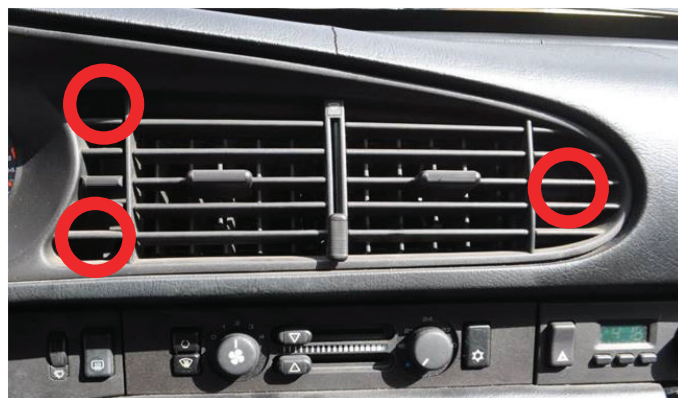


Photo 3



Photo 4



SEE SECOND PAGE FOR PM01.23v2 INSTRUCTIONS

ExactFit - Magnetic Phone Mount

VW mk4

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.



Part List:

(1) Mounting Bracket - P/N - PM23v2

(1) P/N - PM01

- Aluminum Ball

- Magnetic Pad Assembly

- Steel pads

(1) Button Head Socket Cap Screw - 10/32 x .5" - MC97763A232

(1) External-Tooth Lock Washer #10 - MC95584A205

1. Install the aluminum ball onto the metal bracket as shown using the supplied screw and lock-washer.
2. Use a trim removal tool or a flat head screw driver to carefully pry the adjustable vent grille until it pops out. Repeat this step on both center vent grilles. (Photo 1)
3. Remove the two T25 torx screws from the top corners of the center air vents. (Photo 2)
4. Carefully pull the plastic air vent housing from the dashboard until you are able to slide the phone mount bracket behind outer lip. (if necessary, remove the switches and blanks to ease this step).
5. Align the phone mount bracket with the T25 torx screw hole and reinstall both screws. Reinstall the vent grilles.
6. Attach the phone to your mount.
7. Enjoy your new Rennline product.

Photo 1

Photo 2



Photo 3



Photo 4

