

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Do to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and

Monoball Strut Mount

964/993

Check to make sure that you have all parts listed prior to installation. If anything is missing contact us immediately. 802.893.7366

- Parts List:
- (2) Monoball Assemblies
 - (2) Bodies
 - (2) Aluminum Retaining Nuts
 - (2) FK Com16T Bearings
 - (8) M8X30mm Black Steel Button Head Screw - MC91239A428
 - (16) M8 SS Washers - MC90965A190
 - (8) M8 Steel Nuts - MC90725A715
 - (12) M8 SS Plugs - MC92015A139

Step 1 - If these are to be installed on the front of the car with Rennline Adjustable Camber Plates, please see instructions included with camber plate. If installed on the rear skip to Step 2.

Step 2 - Install M8 x 30mm bolts as shown here

Step 3 - Remove Factory shock mounts

Step 4 - Install monoball assembly as shown below


Step 5 - Torque hardware to 32 ft-lbs.

Green - Mounting hardware - 964

Red - Mounting hardware - 993

White - Plug

Note: Use thread lock

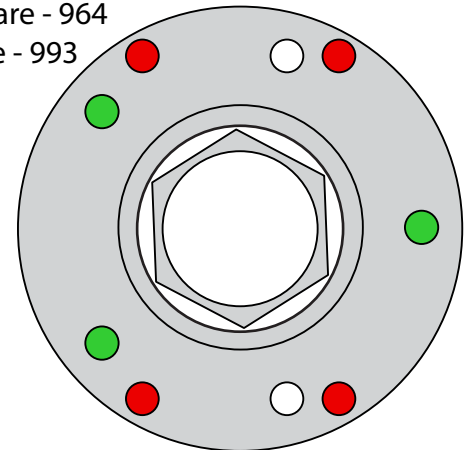

Note : If the shock being used does not have a hat then one will need to be installed prior this installation.

