

Strut Tower Brace - Monoball - 3 point


1966-89 911/912
W/power Assist Brakes

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation. If anything is missing contact us immediately.

- (1) Left Side Bracket
- (1) Right Side Bracket
- (2) Retaining rings
- (12) M6X10 S/S Button Head MC92095A224
- (3) 1/2-13 X 1.25" S/S Button Head MC92949A714
- (3) 1/2" SS Washer MC98017A209
- (3) 1/2" - 13 SS Hex Jam Nut MC91847A520
- (1) FK EM8 Rod End
 - (1) 1/2"-20 Jam Nut MC94846A525
- (1) FK EML8 Rod End
 - (1) 1/2"-20 Jam Nut MC99612A133

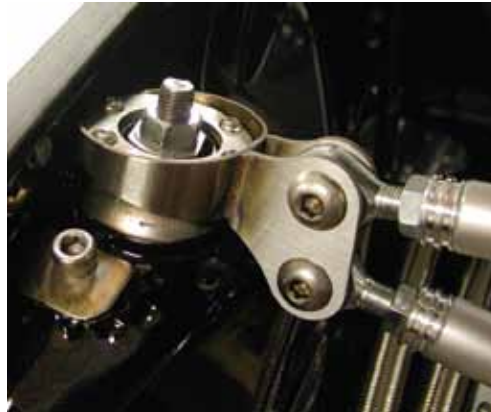

1. If you are installing this brace on a RHD car, reverse the brackets in step 1&2 .
2. Install passenger side bracket to the top of your Rennline Monoball as shown in photo 1. using the supplied (6) M6 button head screws and (1) retaining ring. Leave loose at this time.
3. Install the drivers side bracket the same way as the passenger side. See photo 2.
4. Install the lower mount around the base of your brake booster bracket using the factory hardware as shown in photo 3. The bracket for RHD cars will be flipped so that the bar mounting hole is pointing toward the left hand side of the car.
5. Install the rod ends into the bar. Note: left hand threads are indicated with a red dot.
6. Install bar assemblies into brackets as show in the photos above. Once the bars are installed, tighten all hardware.