

Rear Subframe Stabilizer


986/987

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation.
If anything is missing contact us immediately.

- (2) 3/8-16 S/S Button Head Screws MC
- (1) 14" Bar Assembly
 - (1) 1/2-20 Rod End - CVEM8
 - (1) 1/2-20 Rod End - CVEM8L
 - (1) 1/2-20 Jam Nut - MC94846A525
 - (1) 1/2-20 Jam Nut - MC99612A136
 - (2) 3/8 Bronze Bushings .5 OD - MC6391K174

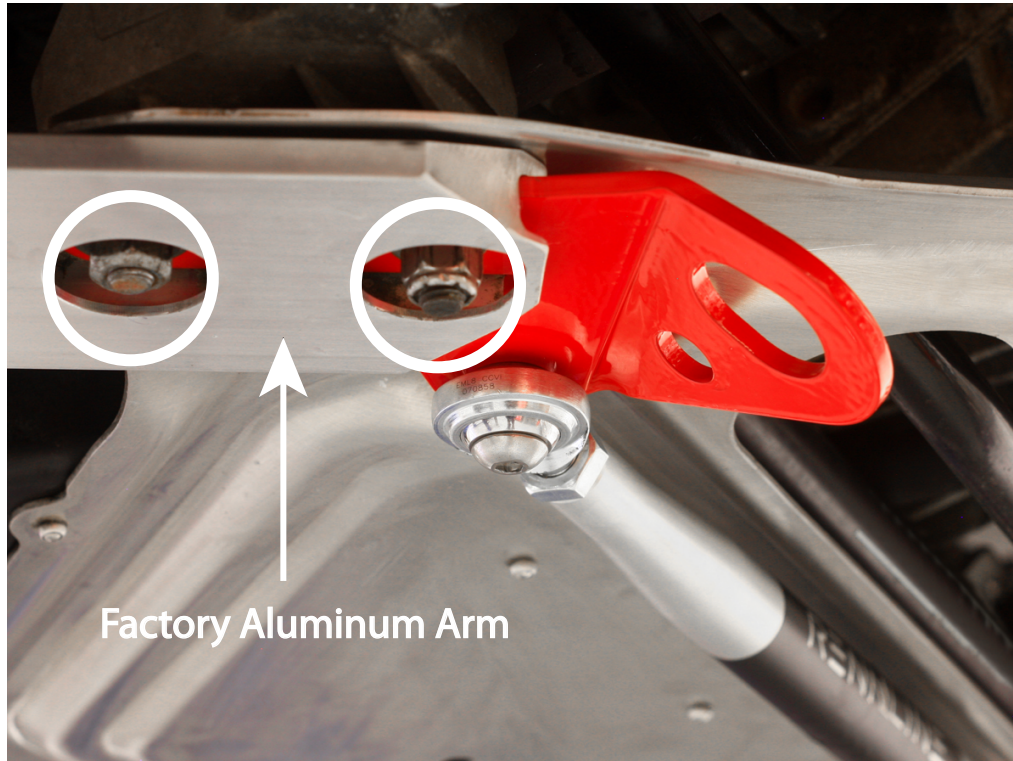

1. Install your Rennline tie down brackets P/N E35 using the instructions supplied with that package.
2. Adjust the length on the your subframe stabilizer bar by rotating the center aluminum section while keeping the rod ends stationary.
3. Adjust the bar so that the holes in the rod ends align with the threaded holes on your Rennline rear tie down P/N E35.
4. Install bar using the supplied hardware as shown above.
5. Rotate the bar so that the Rennline logo is visible and then tighten the lock nuts on both ends of the bar.