

**Aluminum Skid Plate**


VW ---mk5/mk6

**READ BEFORE INSTALLATION**

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

Check to make sure you have all parts listed prior to installation.  
If anything is missing contact us immediately.

- (1) Skid Plate
- (3) - MC 92095A240- Metric 18-8 SS Button Head Socket Cap Screw M6 Size, 20 mm Length, 1 mm Pitch
- (3) - MC 91116A150- Metric 18-8 SS M6 Washer

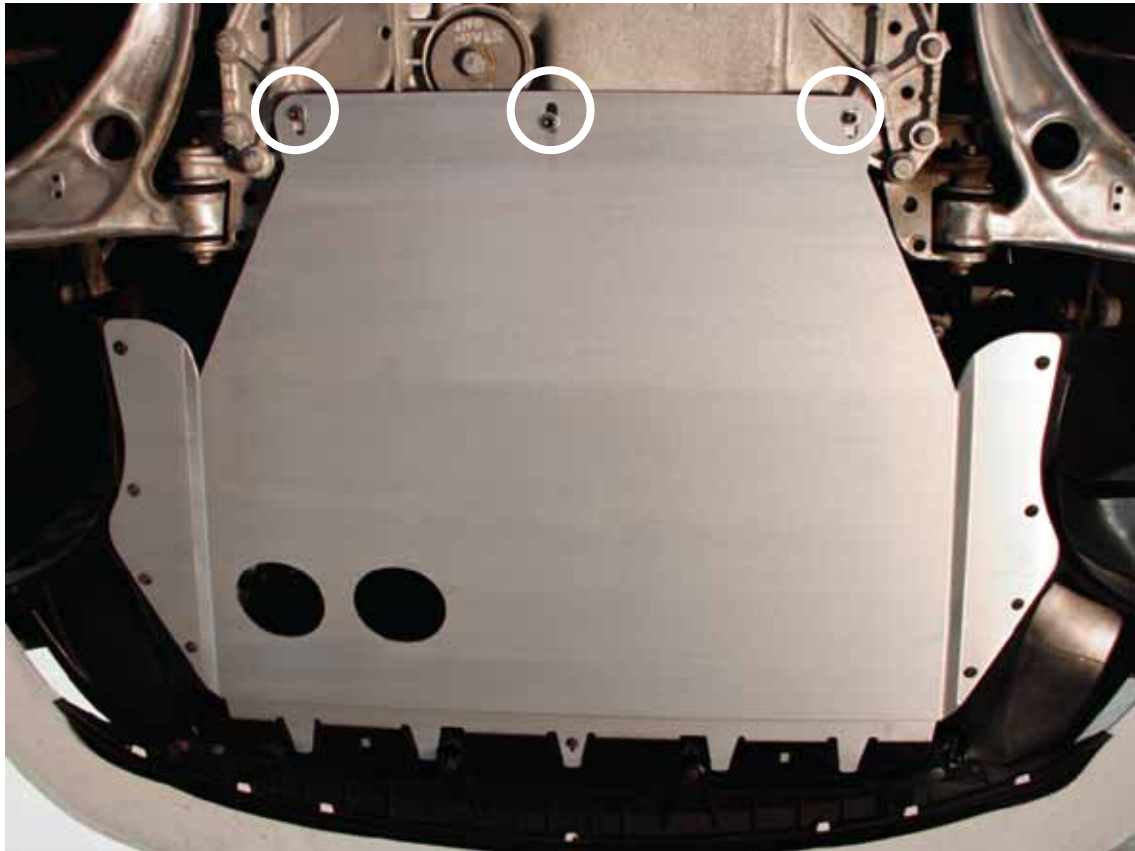

This skid plate is a direct replacement to the factory plastic engine cover . Remove the factory unit and install the aluminum skid plate using the factory hardware for the front and both sides. Use the (3) bolts and washers supplied with this kit to attach the back edge of the plate as shown in the photo above.