


READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and should be installed by a qualified automotive technician.

Parts List:

- (2) Tie Down/Jack Plates
- (2) 1/2 -13 x 1" Bolts MC 92865A712
- (2) 1/2 SS Washer MC 98017A209

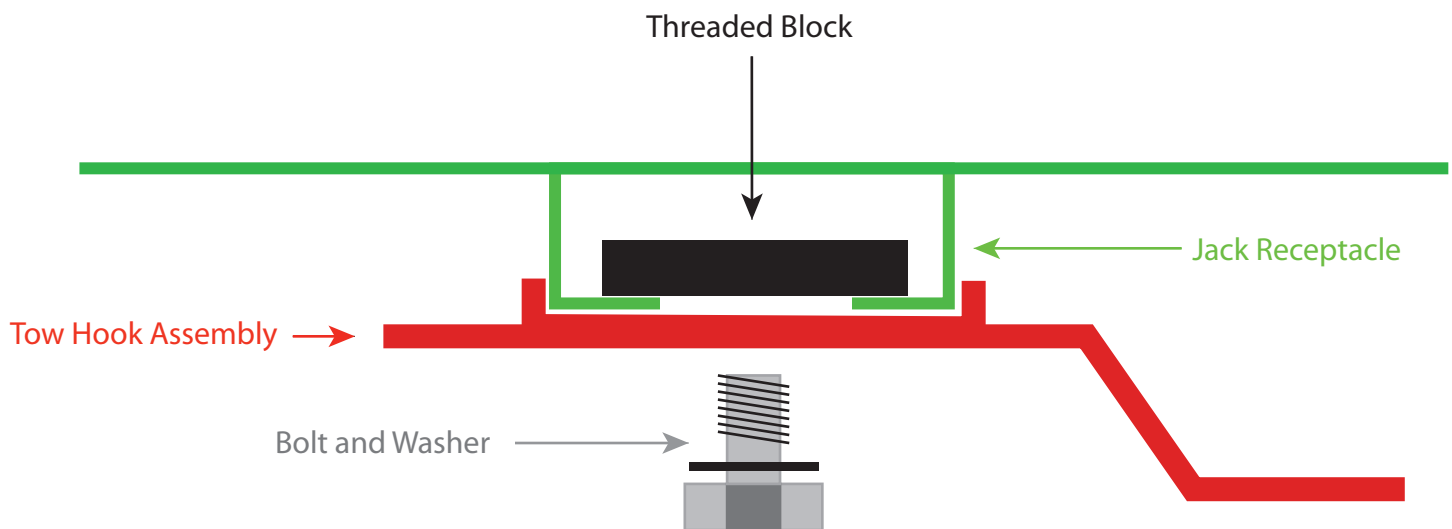

1. Insert the threaded block through the hole in the jack receptacle.
2. Place the tow hook assembly on the bottom of the jack receptacle, with the locking tabs positioned to the front and rear of the jack receptacle. The tow strap hole will be pointing to the front wheel on the opposite side of the car.
3. Insert the supplied bolt and washer through the tow hook center hole and into the threaded block.
4. Make sure everything is properly aligned and tighten bolt.
5. Switch to the other side of the car and repeat.