


READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and should be installed by a qualified automotive technician.

Parts List:
(2) Tie Down

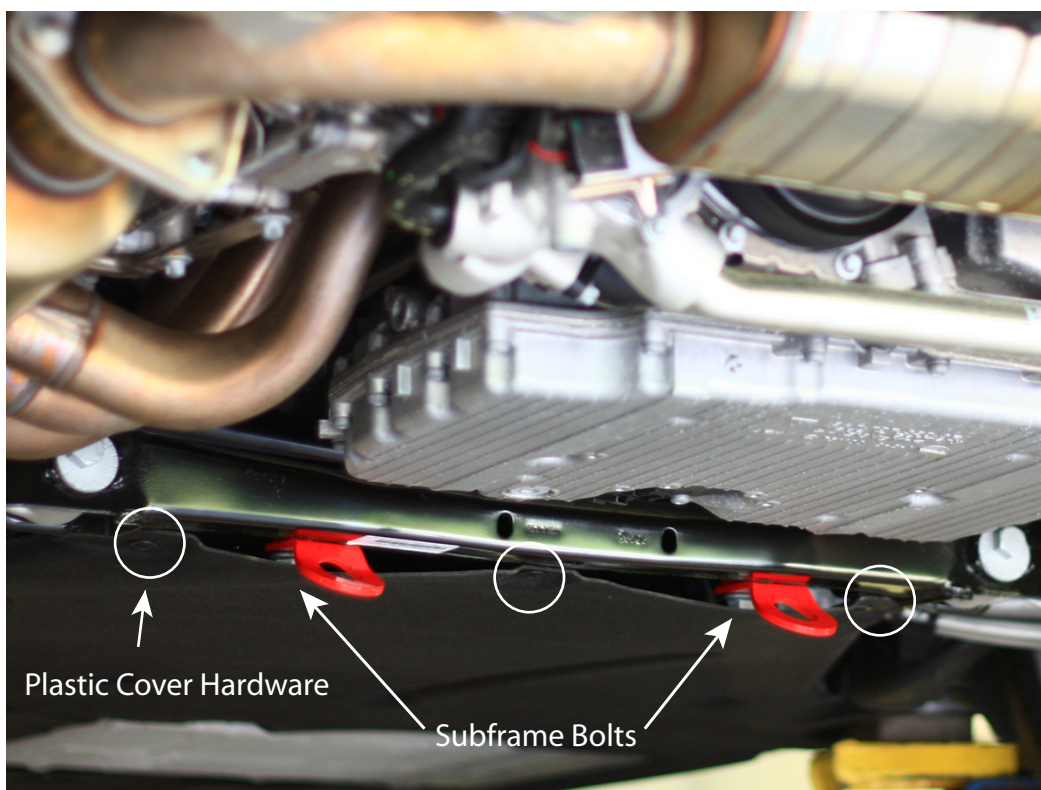

1. Remove the hardware on the back edge of the factory plastic undercarriage cover giving you access to the subframe mounting bolts.
2. Remove one of the factory bolts and install a tow hook with the flange side of the hook positioned up against the subframe.
3. Tighten the bolt and repeat installation on the other side.
4. Re-install the undercarriage hardware.

Note: If desired, you can cut your undercarriage cover around the bolt heads allowing the plastic cover to sit flat. This operation is not necessary.