

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. Accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use and should be installed by a qualified automotive technician.

Passenger Side Pedal/Floorboard

Mini R55,R56,R57

1. Remove factory floor mat from car.
2. Thoroughly clean carpet removing any dirt or grease.
3. Allow carpet to completely dry before proceeding with installation.
4. Place mounting plate into car to determine installation location. Once you are satisfied with its location, place tape around the perimeter so that you can relocate the mounting plate during final installation. (See Figure 1)
5. Remove clear protective coating from Velcro and mount backer plate into original location that is defined by tape. (See Figure 1)
6. Firmly press backer plate against carpet to insure a good adhesion. This adhesive gets stronger with time, so allow a few days before trying to remove this unit for any reason.
7. Attach face panel to mounting plate using the supplied stainless steel button head screws. (See Figure 2)
8. Pull bottom edge of face plate out and slide floor mat or Track Mat into position.

Note: If you are installing this into a track car or a car that requires a permanent installation , Rennline has drilled holes to help with this process. Special brackets or hardware may be required for your specific needs that are not included with this kit. Due to the many variations of this product. Photos may not represent the exact model you are installing.

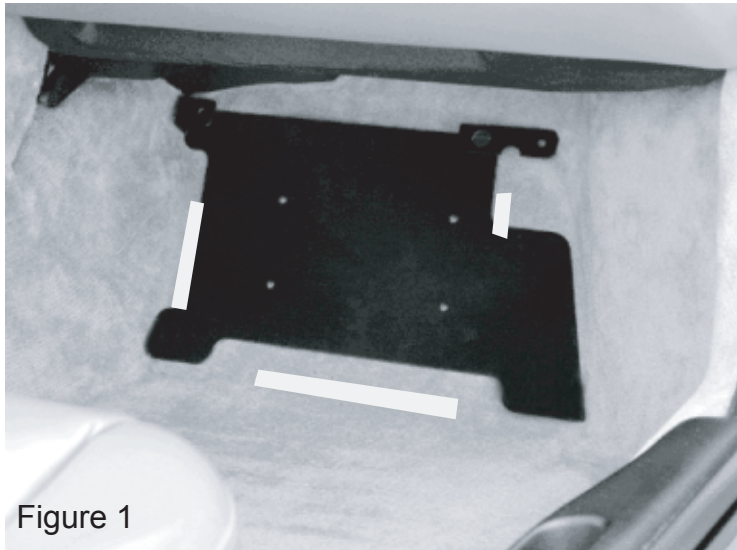


Figure 1

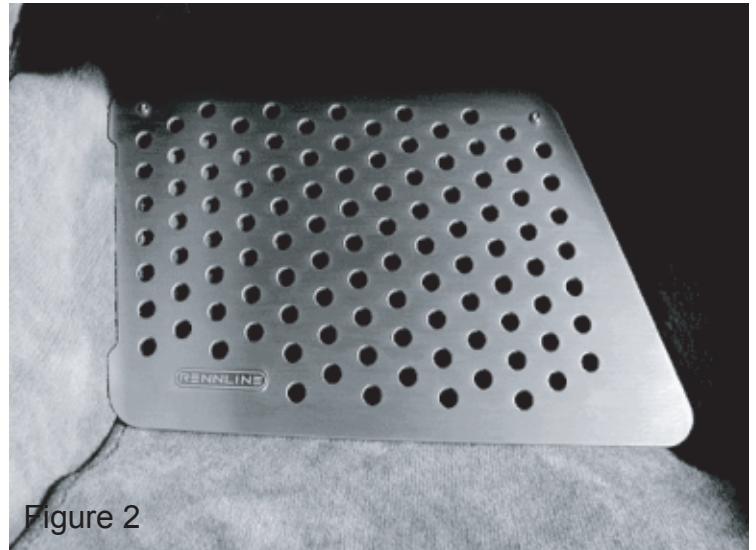


Figure 2

Check to make sure you that have all parts listed prior to installation. If anything is missing contact us immediately.

Parts List

- (2) 10/32x1/2" Button head S/S screws
- (1) Floorboard face plate (Black or Silver)
- (1) Mounting plate (Black)
 - (1) Velcro 12"
 - (2) 10/32 nutserts - MC95105A135
 - (2) rubber bumpers - MC9723K85

P/N - F51* (S, B)

Shown with Rennline Track Mat

