


Fire Extinguisher Mount -

Porsche OEM 996 GT3 Race Seat

READ BEFORE INSTALLATION

The use of any Rennline product is the sole responsibility of the end user. Rennline Inc. accepts no responsibility for warranty voids or damage resulting from the use of these products. Due to the varying location of wiring harnesses and other components, carefully inspect any area prior to drilling. All Rennline products are intended for off road use only and should be installed by a qualified automotive technician.

- (1) Mount
- (6) 10/32 X.5" S/S Button Head Screws - MC92949A265
- (12) #10 S/S Washer - MC92141A011
- (6) 10/32 Nyloc Nuts - MC91831A4**

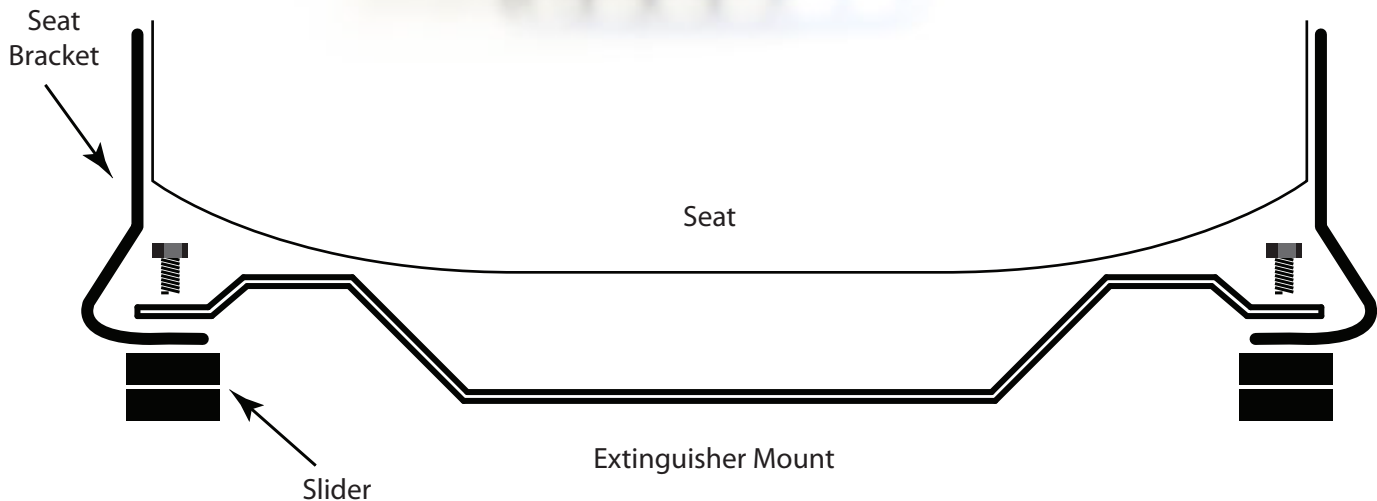

1. Disconnect the seat from the sliders.
2. Install the fire extinguisher mount above the seat brackets as shown in the drawing above.
3. If you are installing a sub belt bracket, place the bracket on the top of the fire extinguisher mount .
4. Using the factory bolts, re-install everything to the sliders.
5. Attach fire extinguisher using the supplied hardware.