



Order Online: WWW.RENNLINE.COM

EM Sales@rennline.com

PH 802.893.7366

FX 802-893-7311

Driven to improve excellence.

911/930 1965-89




Remove old strap. We recommend cutting off one end to make it easier to pull out from the bottom of fan housing.



Slide Rennline bracket into place.



Attach end brackets using the supplied stainless steel hardware.

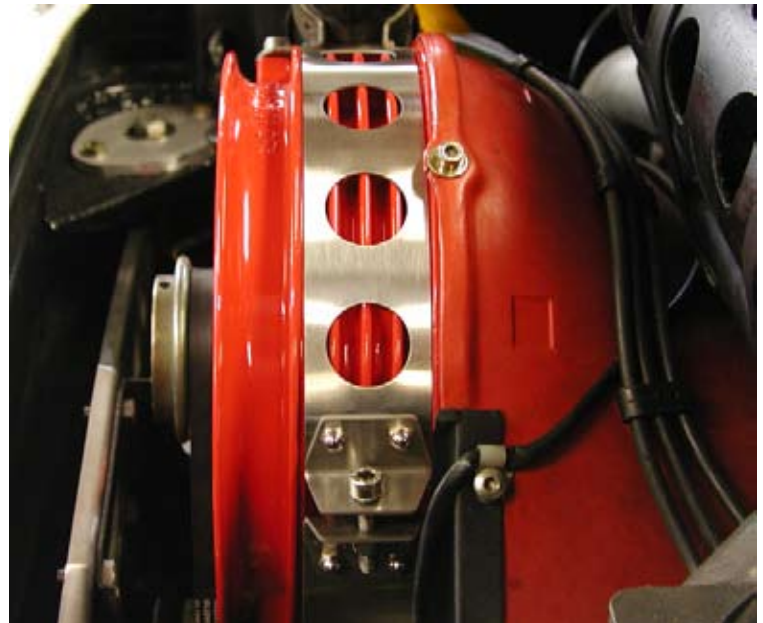

Install tension allen bolt/nut and tighten.