

SECTION 2000-FIXTURE ASSEMBLY

BACKERBOARD INSTALLATION

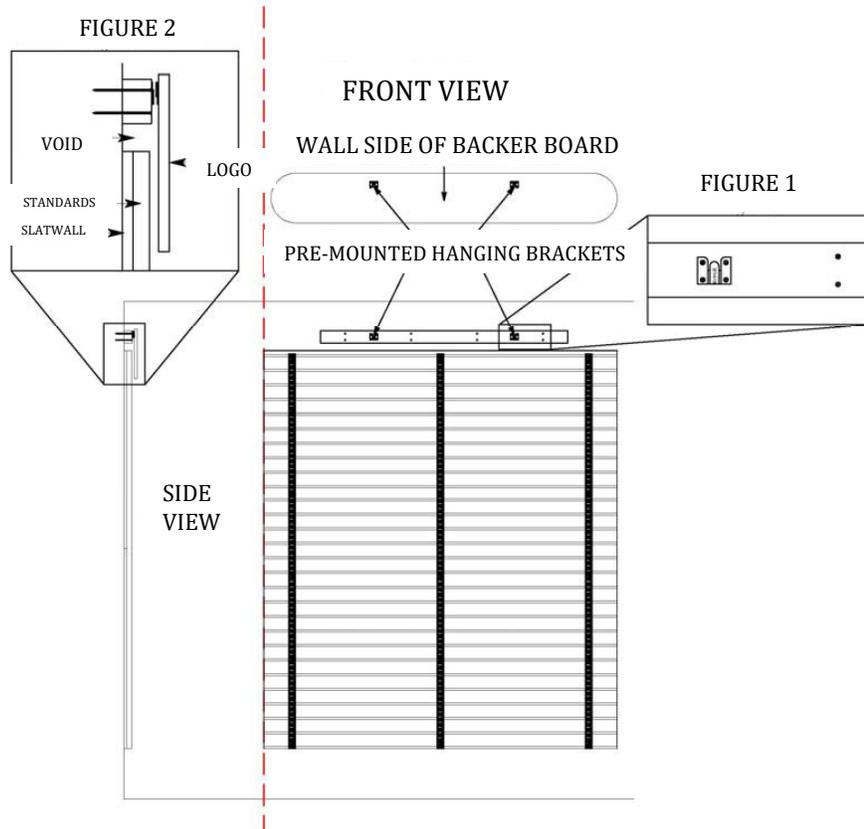


Figure 1:
Mount the wall blocking w/ the pre mounted hanging brackets to the wall using two screws per stud as often as possible. For layouts with a ceiling height less than 12' mount the logo at 9'- 6" A.F.F. For ceiling heights greater than 12' mount the logo at the maximum height of 11' -0" A.F.F.

Figure 2:
In ceiling heights less than 12' the logo should be installed at 9' -6" which will drop the Logo down below and cover existing slatwall.



Apply the logo to the backer board. To ensure a proper fit the logo is designed to be slightly larger than the backer board. Therefore, after you apply the logo use a snap blade to trim off excess vinyl.