


# SECTION 5000- FIXTURE ASSEMBLY

## HANGER TRANSPORTER ASSEMBLY

INCLUDES 2 BOXES: A & B

### BOX A:

- 2 UPRIGHTS
  - 1 W/HOLES THROUGH BOTH SIDES
  - 1 W/HOLES HALFWAY THROUGH BOTH SIDES
  
- 2 LOCK SLIDES
  
- 1 HARWARE KIT CONTAINING:
  - 1-ALLEN WRENCH
  - 8-BOLTS
  - 8-FLAT WASHERS
  - 8-LOCKWASHERS

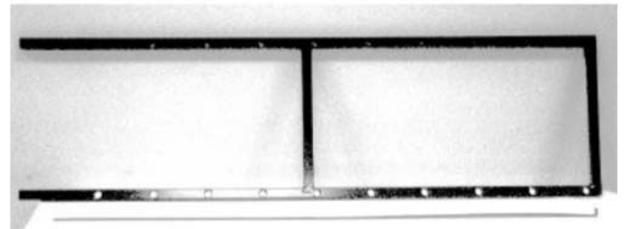

Uprights & Lock Slides



Hardware Kit

Allen Wrench


Bolts

Flat Washers

Lock Washers

### BOX B:

- 1 BASE
- 1 CASTER KIT CONTAINING:
  - 4-CASTERS
  - 1-WRENCH
  - 4-FLAT WASHERS
  - 4-NUTS
  
- 2 HANGRODS W/HOLES AT THE ENDS
  
- 4 HANGROD PINS
  
- 18 HANGRODS W/OUT HOLES

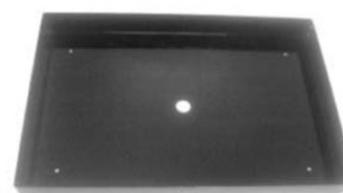

Base

Hardware Kit



Caster Kit



Hangrods & Hangrod Pins

5005

# SECTION 5000- FIXTURE ASSEMBLY

## HANGER TRANSPORTER ASSEMBLY INSTRUCTIONS:

### **Step 1: Items Needed: 1 Base and 1 Caster Kit**

Place base upside down (flatside up). Using enclosed wrench, screw casters into the threaded holes until tight. Flip base over, put on washers and screw on finishing nuts.



Step 1

### **Step 2: Items Needed: 2 Uprights and 1 Hardware kit**

Place base with attached casters on the floor. Slide an upright (with holes facing in) on the inside base with the threaded screw holes on bottom of upright facing out. Take bolts from hardware kit and start all four bolts before tightening. Finish by using enclosed Allen Wrench to tighten all bolts. Repeat Step 2 on opposite side of base.



Step 2

### **Step 3: Items Needed: 2 Hangrods w/ holes in end & 4 Hangrod Pins**

Take hangrod with holes in the ends and slide through the top most holes in uprights. Take hangrod pin and looking down from the top of the upright, slide pin down through holes in hangrod.



Step 3

### **Step 3 Repeat on opposite side.**

### **Step 4: Items Needed: 18 Hangrods w/o holes**

Lay the unit on floor with the upright that has holes going all the way through, facing up. Take hangrod without holes and slide into place. Repeat until all hangrods are in place.



Step 4

### **Step 5: Items needed: 2 lock Slides, 1 flat head screw driver (not included) & 1 helping hand.**

Take flat end of the slide lock, slide into top of upright on the outside where the hangrods slide in, with tab at top of the slide lock facing up. Start sliding lock down the inside of upright, covering the holes the hangrod slid into. You may need to use a screwdriver and an extra person to lift up on the slide lock as you push it into place. The slide lock should go all the way to the bottom and cover all holes, with tab resting on top of upright and facing out when done.



Step 5

### **Step 6: Stand upright.**



Step 6