


SECTION 2000-FIXTURE ASSEMBLY

HANGER TRANSPORTER ASSEMBLY

INLCUDES 2 BOXES: A & B

BOX A:

- 2 Uprights
 - 1 w/ holes through both sides
 - 1 w/ hold half way through both sides
- 2 Lock Slides Seams & Beginning c
- 1 Hardware Kit Containing:
 - 1- Allen Wrench
 - 8- Bolts
 - 8- Flat Washers
 - 8- Lock Washers

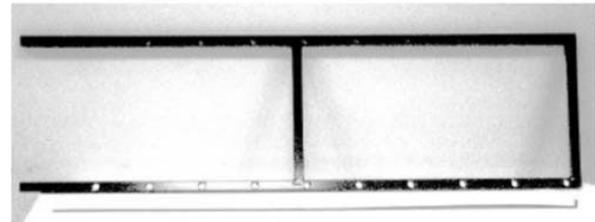

Uprights & Lock Slides



Hardware Kit

Allen Wrench


Bolts

Flat Washers

Lock Washers

BOX B:


- 1 BASE
- 1 CASTER KIT CONTAINING:
 - 4-CASTERS
 - 1-WRENCH
 - 4-FLAT WASHERS
 - 4-NUTS
- 2 HANGRODS W/HOLES AT THE ENDS
- 4 HANGROD PINS
- 18 HANGRODS W/O HOLES

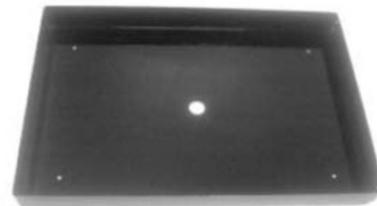

Base
Hardware Kit



Caster Kit

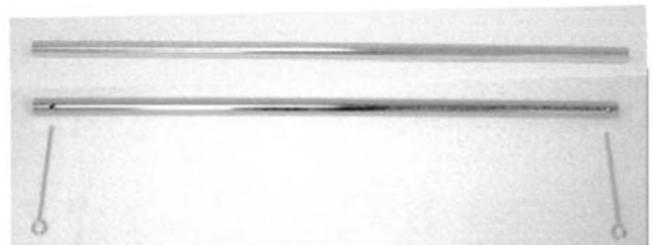

Hangrods & Hangrod Pins


5005

SECTION 2000-FIXTURE ASSEMBLY

HANGER TRANSPORT ASSEMBLY INSTRUCTIONS

Step 1: Items Needed: 1 Base and 1 Caster Kit

Place base upside down (flat side up). Using enclosed wrench, screw casters into the threaded holes until tight. Flip base over, put on washers and screw on finishing nuts.



Step 1

Step 2: Items Needed: 2 Uprights and 1 Hardware kit

Place base with attached casters on the floor. Slide an upright (with holes facing in) on the inside base with the threaded screw holes on bottom of upright facing out. Take bolts from hardware kit and start all four bolts before tightening. Finish by using enclosed Allen Wrench to tighten all bolts. Repeat Step 2 on opposite side of base.



Step 2

Step 3: Items Needed: 2 Hangrods w/ holes in end & 4 Hangrod Pins

Take hangrod with holes in the ends and slide through the top most holes in uprights. Take hangrod pin and looking down from the top of the upright, slide pin down through holes in hangrod. Repeat Step 3 on opposite side.



Step 3

Step 4: Items Needed: 18 Hangrods w/o holes

Lay the unit on floor with the upright that has holes going all the way through, facing up. Take hangrod without holes and slide into place. Repeat until all hangrods are in place.



Step 4

Step 5: Items needed: 2 lock Slides, 1 flat head screw driver (not included) & 1 helping hand.

Take flat end of the slide lock, slide into top of upright on the outside where the hangrods slide in, with tab at top of the slide lock facing up. Start sliding lock down the inside of upright, covering the holes the hangrod slid into. You may need to use a screwdriver and an extra person to lift up on the slide lock as you push it into place. The slide lock should go all the way to the bottom and cover all the holes, with tab resting on top of upright and facing out when done.



Step 5

Step 6: Stand upright.



Step 6