

SECTION 1000-GENERAL SPECIFICATIONS

INSTALLATION INSTRUCTIONS FOR CABINET REFACING SLATWALL

Statements expressed in this technical bulletin are the recommendations for the application of Marlite brand products as outlined under normal conditions of installation. The recommendations provided represent our best judgment based on our experience with normal applications. Unless prior approval is obtained in writing from Designed Environments, any deviation from these recommended procedures shall be at the sole risk of the installers.


Store panels in a COOL, DRY environment. Open cartons and inspect all panels carefully. The panels should be allowed to equalize to the moisture in the room environment prior to installation. This is accomplished by standing slatwall separately around the room in which it will be installed for at least 48 hours before application.

Make sure to cut panels face down with a circular saw to insure a clean-cut edge. Cut from the back of the panel to avoid chipping the surface. If a table saw is used, lay out and cut on the front surface. Masking tape over the cut line may also reduce potential splintering.

There are three different refacing slatwall colors: Lapis Blue, Island (green), and North Sea (grey). Please refer to the "Cabinet Refacing" drawing that was sent to you for a detailed schematic of where each color will be located.

INSTALLATION STEPS

1. Find the exact cut line for each slatwall panel by measuring front the floor to the bottom of the countertop overhang
2. Mark the cut line for each panel with a chalk line or pencil and cut the excess off (make sure to cut into the 16 3/4" section as pictured below)
3. Screw each piece of slatwall into the cabinets through the metal inserts, not the wood
4. Once all panels are in place, install the white styrene corner molding to each exposed edge/corner

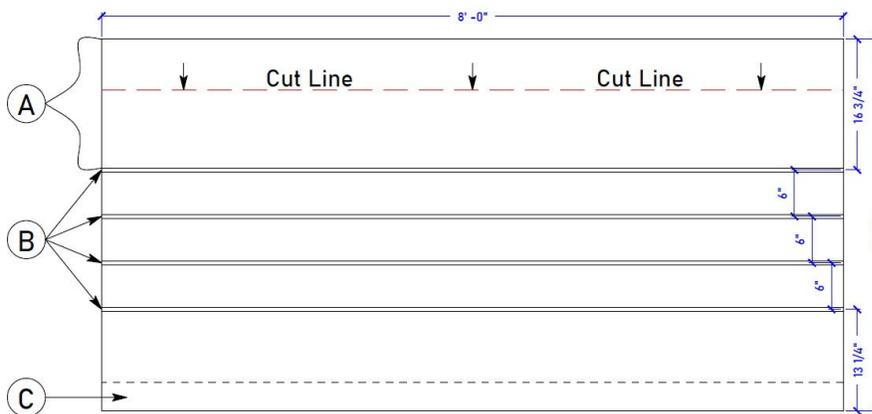

- A. The top 16 3/4" section is designed to be cut to fit under the counter top. The bottom 13 1/4" needs to remain as is.
- B. Aluminum inserts spaced 6" o.c.
- C. Optional 4" vinyl cove base to installed to cover uneven floor surfaces.