

1

- SCREW IN NYLON LEVELERS
- INSERT THE WALL FACEOUTS INTO THE UPRIGHT.
- CHECK THAT THE WALL FACEOUT IS SECURELY INSIDE THE UPRIGHT.
- TIGHTEN TENSIONER ON THE WALL FACEOUT TO PREVENT LOOSENING.

PLACE AS HIGH AS POSSIBLE

UPRIGHT

PLACE AS LOW AS POSSIBLE
WHILE AVOIDING ANY
MOLDING OR BASEBOARD.


NYLON LEVELER

WALL FACEOUT


TIGHTEN TENSIONER

TOOLS REQUIRED FOR ASSEMBLY

- TAPE MEASURE
- BUBBLE LEVEL OR LASER LEVEL
- MOUNTING HARDWARE
(TO BE PROVIDED BY INSTALLER)
- LADDER

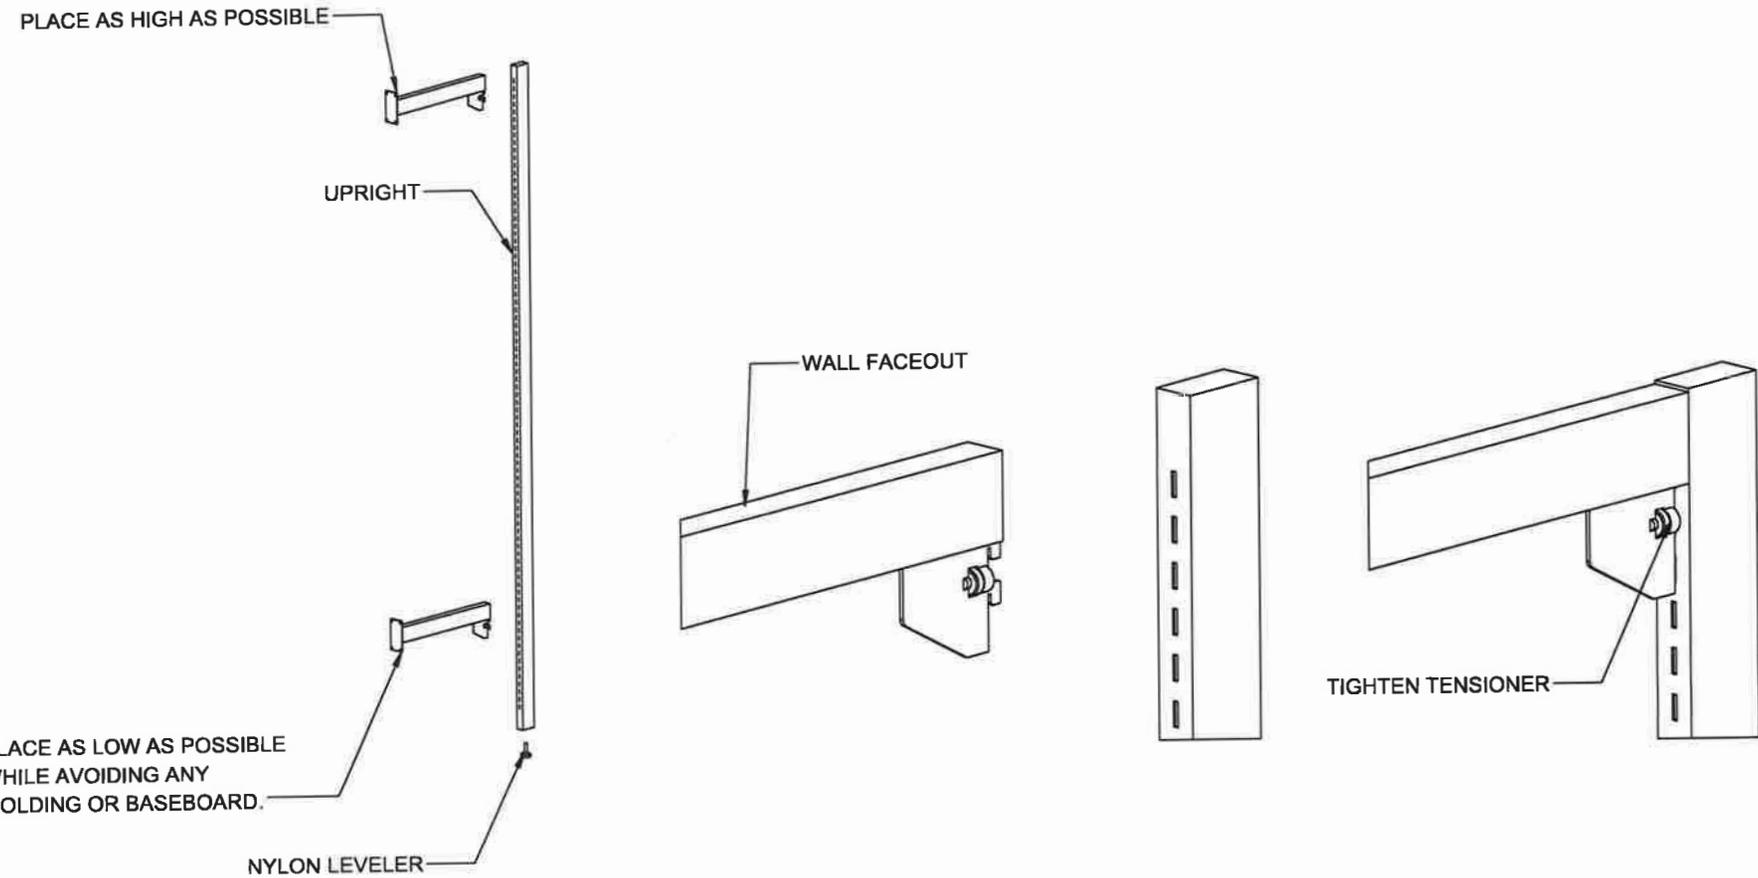

- 2** POSITION UPRIGHT ONTO WALL.
CHECK THAT EVERYTHING IS LEVEL BEFORE SCREWING INTO WALL.
SCREW INTO WALL (HARDWARE TO BE PROVIDED BY INSTALLER).

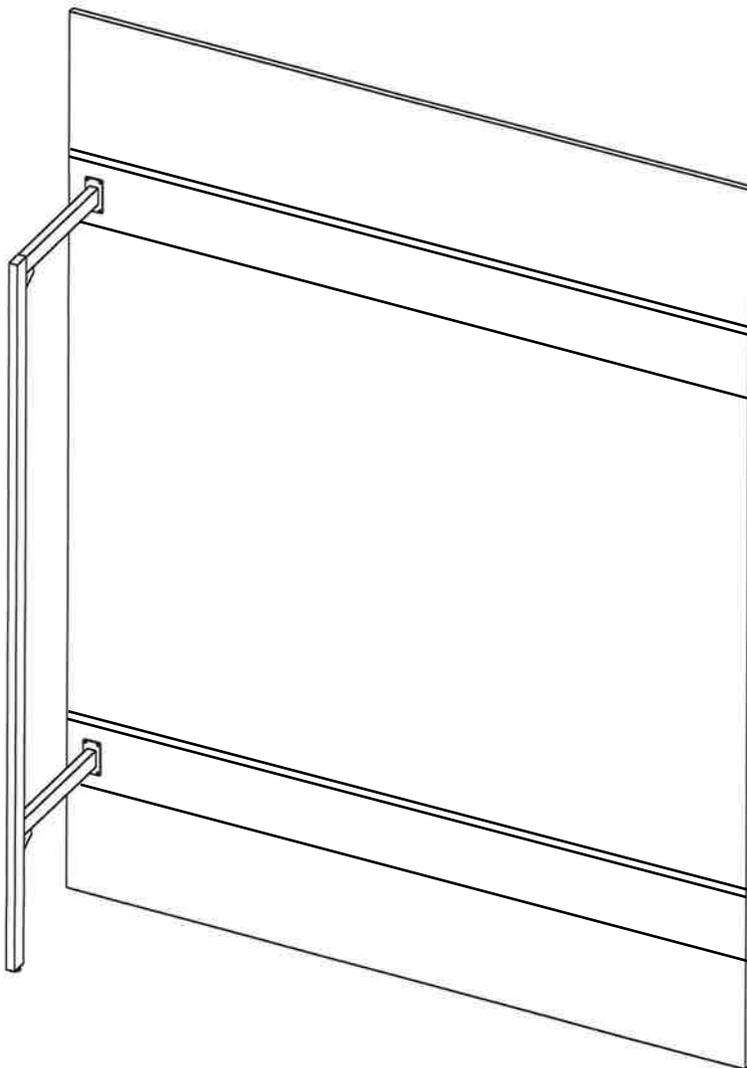

- 3** PLACE SECOND UPRIGHT ON THE WALL.
DO NOT SCREW TO WALL YET.

USE AN ACCESSORY SUCH AS A SHELF OR HANGRAIL TO SPACE OUT THE SECOND UPRIGHT.

IF ACCESSORIES ARE NOT AVAILABLE, USE A TAPE MEASURE TO ADJUST THE ON CENTER DISTANCE BETWEEN UPRIGHTS. MAKE SURE THE ON CENTER DISTANCE IS THE SAME ON TOP AND BOTTOM.

SCREW THE SECOND UPRIGHT IN PLACE.

