


# SECTION 2000-DETAIL DRAWINGS

## HANDBAG MODULE AND ALUMINUM EDGE MOLDING INSTRUCTIONS

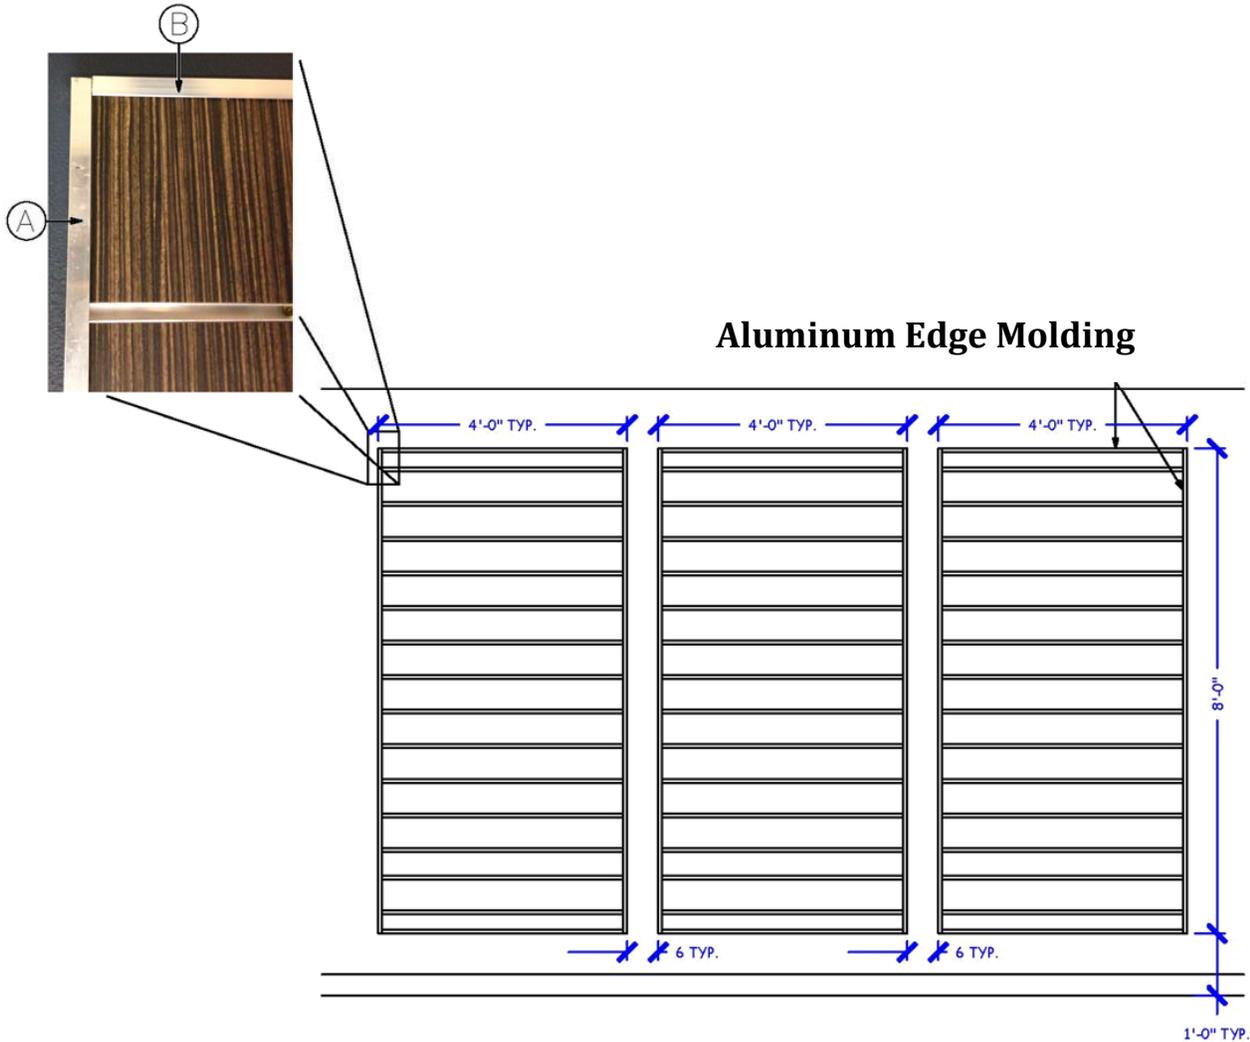

**\* To reduce waste use 8' Aluminum Edge Molding strips on the sides (A), and cut to fit both the top and bottom sections(B) to fit.**

**\*\* Adhere Aluminum Edge Molding strips to the slatwall with a small amount of construction adhesive.**