




Schedule 40 Fittings & Accessories Technical Information

Repair Couplings Dimensions & Information

Repair Couplings

Spigot x Socket
EPDM O-ring

Pressure Rating
1/2" - 2" 235 psi @ 73°F
2-1/2" - 4" 200 psi @ 73°F
6" & Up 150 psi @ 73°F

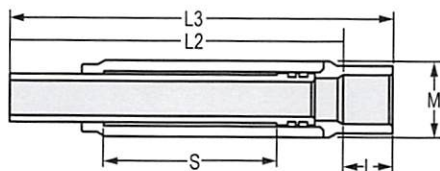


Part Number	Size	L	L2	L3	M	S	Approx. Wt. (Lbs.)
S118-05	1/2	7/8	5-7/8	6-3/4	1-7/16	3	.25
S118-07	3/4	1	7-3/8	8-1/4	1-3/4	4	.42
S118-10	1	1-1/8	7-7/8	8-7/8	2-1/16	4	.62
S118-12	1-1/4	1-1/4	8-3/8	9-5/8	2-7/16	4	.87
S118-15	1-1/2	1-3/8	8-5/8	9-7/8	2-11/16	4	1.03
S118-20	2	1-1/2	9-1/4	10-5/8	3-3/16	4	1.50
S118-25	2-1/2	1-3/4	12-3/8	13-7/8	3-15/16	6	3.48
S118-30	3	1-7/8	12-3/8	14-1/8	4-9/16	6	4.32
S118-40	4	2-1/4	13-1/4	15-1/4	5-11/16	6	6.40
S118-60	6	3	16	18-3/4	8-3/8	6	14.53

INSTALLATION NOTE: For expansion joint applications, install with unit 1/2 extended. System must be supported and blocked against thrusts and movement under pressure. May be installed with flow in either direction.

Repair Couplings

Socket x Socket
EPDM O-ring

Pressure Rating
1/2" - 2" 235 psi @ 73°F
2-1/2" - 4" 200 psi @ 73°F
6" & Up 150 psi @ 73°F

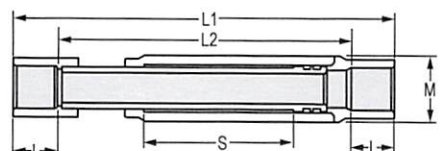

Part Number	Size	L	L1	L2	M	S	Approx. Wt. (Lbs.)
S119-05	1/2	7/8	7-5/8	5-7/8	1-7/16	3	.28
S119-07	3/4	1	9-3/8	7-3/8	1-3/4	4	.47
S119-10	1	1-1/8	10-1/8	7-7/8	2-1/16	4	.70
S119-12	1-1/4	1-1/4	10-7/8	8-3/8	2-7/16	4	.98
S119-15	1-1/2	1-3/8	11-3/8	8-5/8	2-11/16	4	1.17
S119-20	2	1-1/2	12-1/4	9-1/4	3-3/16	4	1.72
S119-25	2-1/2	1-3/4	15-7/8	12-3/8	3-15/16	6	3.87
S119-30	3	1-7/8	16-1/8	12-3/8	4-9/16	6	4.86
S119-40	4	2-1/4	17-3/4	13-1/4	5-11/16	6	7.27
S119-60	6	3	22	16	8-3/8	6	17.17

INSTALLATION NOTE: For expansion joint applications, install with unit 1/2 extended. System must be supported and blocked against thrusts and movement under pressure. May be installed with flow in either direction.