


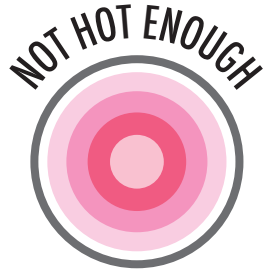

DID YOU TEST YOUR WARMER?



IS A CLIENT OR A BLANKET LAYING ON TOP OF THE TABLE WARMER?



IS YOUR WARMER OPERATING, AND THEN SHUTTING OFF?



DID THE CONTROLLER AUTO-SHUT OFF?

Roll up your warmer, set it to high heat and wait 5 minutes. Place your hand in the center. If you feel heat, it's working

The DLX™ Table Warmer is designed to provide plenty of heat, but only when a client or blanket is laying on it will it retain the heat

The DLX™ Table Warmer controller includes a USER SET countdown timer feature, which automatically shuts the warmer off when it reaches 0:00:00

After the controller has auto-shut off, press and hold the power button for 5 seconds to turn it back on

TIP:
Adding a blanket will help insulate and retain heat between services

The DLX™ pad provides warmth within 5 minutes of a client laying on it

Make sure the timer is set to your desired time

If your power source is working, and the display no longer turns on, it could be that the overheat safety circuit has been activated. If the display is no longer working, the pad needs to be replaced

DID IT WORK?

DID IT HELP?

DID IT WORK?

DOES IT WORK?

NO **YES**

YES **NO**


NO **YES**

YES **NO**

GLAD WE COULD HELP!

CALL US PLEASE !!

GLAD WE COULD HELP!

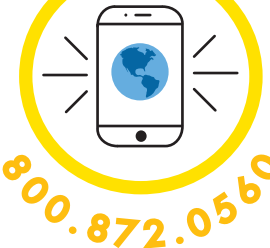

EarthLite®
WORLD'S #1 BRAND IN MASSAGE™

Thank you for purchasing an Earthlite® product.

