



Contact Us

Earthlite
990 Joshua Way
Vista, CA. 92081
(800) 872-0560
(760) 599-1112 Int'l
(866) 599-7374 fax
info@earthlite.com

Hours of operation:

Monday - Friday
8:00 a.m. to 5 p.m.
PST

Saturday - Sunday
Closed

For additional products, visit us online at: earthlite.com



Join us on
Facebook



Follow us on
Twitter



Connect with us
on Linked In

Other Earthlite® Products Recommended:



Bodyworker's Choice Massage Table Warmer



Bodyworker's Choice Massage Table Warmer

- Full-Sized Table Warmer (71" x 30")
- Multiple Heat Settings with Auto Overheat Protection
- Convenient, Easy-to-Use controller
- Non-Slip Elastic End Straps



Safety Information

WARNING

In order to reduce the risk of fire, electrical shock, and/or injury to persons when using the electrical appliance, it is important to follow these basic safety precautions:

- Intended for use ONLY as a massage table warmer. This is NOT a blanket. This is NOT a heater.
- Not intended for use with pets.
- Unfold completely for proper use.
- Check table warmer frequently to ensure it is NOT bunched or folded as this could cause excess heat and result in injury or fire.
- If your table warmer does not function properly, discontinue use immediately and consult the manufacturer or distributor.
- Regularly inspect the cord, plug, power supply and table warmer for damages. If damaged, discontinue use immediately and consult the manufacturer or distributor.
- If using an adjustable height massage table, make sure the cord cannot be caught.
- Pad should NOT hang over the edge of massage table.
- Do not leave disabled persons, infants, or young children unattended while in use.
- Long applications on the high setting can result in skin irritation or burns.
- Keep control unit away from open windows.
- Do not pierce with sharp objects.
- Use table warmer only on an alternating current supply circuit of correct voltage.
- Keep the flexible power supply and switch (as much as possible) off the top of the table.
- Unplug the unit at the power outlet when not in use.

NOTE: The electrical specifications of the table warmer are:

- North America: 120V, 65W, 60Hz
- Europe/Asia: 220V, 65W, 50Hz

Care & Maintenance

CAUTION

To avoid damaging your table warmer, carefully read and follow the instructions below

- **DO NOT DRY-CLEAN!** Cleaning liquids can deteriorate the insulation and/or covering of the heating unit.
- **DO NOT IRON**
- **DO NOT MACHINE WASH OR DRY**
- **SPOT CLEAN ONLY - see instructions below**

Spot Cleaning Instructions

1. Before cleaning, ensure the control is set to the "Off" position and the plug is removed from the wall socket.
2. Sponge the soiled area using lukewarm water and mild detergent or soap.
3. Follow with a sponging of clean water. To remove excess water, compress the wet area between dry absorbent towels.

Storage Instructions


- Fold neatly and loosely, without sharp bends in the heating element.
- DO NOT place objects on top of you massage table warmer.
- DO NOT ROLL.

Hassle-Free One Year Warranty

Our accessories are warranted for one (1) year from the original date of purchase. This warranty is limited to product repair or replacement, at Earthlite's sole discretion. Warranty claims must provide proof of purchase in order to obtain an Earthlite Return Material Authorization (RMA). Please contact Earthlite customer service at info@earthlite.com to obtain warranty support. Earthlite may require, at its discretion, customer to ship the product(s) back to the factory (at customer's expense) for any warranty claim. Earthlite will return the warranted product, shipping prepaid, to customers in the continental U.S. International customers as well as domestic customers outside of the continental U.S. are responsible for all shipping charges (inbound and outbound), as well as any applicable duties and taxes.

Operations & Controls

See the below diagram showing how to operate the Bodyworker's Choice control. Simply slide the button to the desired temperature setting.

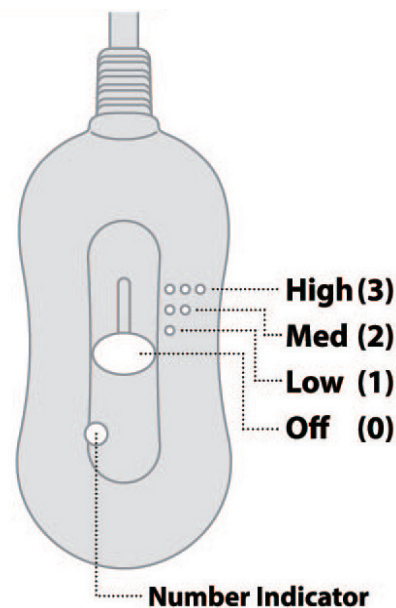

Troubleshooting

My table warmer doesn't heat up

To quickly test the warmer just roll it up, set the controller to 'high' temperature setting, let it heat for a few minutes, but not more than 10. Then test the heat level by inserting your hand or arm in the center of the warmer. Please remember that the temperatures are set for extended contact with sensitive human skin. The fleece on the pad often 'hides' the heat from the casual touch, especially on the low and medium settings.

My table warmer stopped working

Make sure that the power outlet on the wall is working. Then double check the warmer as described above. If no heat is present, the wires in your warmer may have become kinked or a power surge may have tripped the overheat safety circuit in your warmer. This essential element protects the product from burning a client and/or causing a fire. We offer warranty to cover this possibility.

My table warmer is not hot at the highest setting

Please remember that the temperature levels are set for extended contact with sensitive human skin. The heat will dissipate too quickly to notice without someone lying on the warmer. While desired temperature varies from person to person, we believe that the high temperature provides a warm environment for a wide number of clients while at the same time, providing a safety factor to prevent potential burns.

How can I test that my table warmer works properly?

To quickly test the warmer just follow the instructions above and roll it up or you can also lie on top of the warmer for 5 minutes.