

Napa La Mer Treatment Table



© Copyright 2018
Living Earth Crafts®

All rights reserved. This document or any portion thereof may not be reproduced in any way, including photocopying or translation to another language without the prior written permission from Living Earth Crafts.

Living Earth Crafts® is a registered trademark of Earthlite, LLC.

Legal Notice

The information provided in this document is intended for informational purposes only and is subject to change without notice. The information provided in this document should not be construed as a commitment by Living Earth Crafts®.

Living Earth Crafts® assumes no responsibility for the accuracy or suitability of the information contained in this document. This document may contain technical inaccuracies or errors. Living Earth Crafts® makes no expressed or implied warranties of any kind concerning the information contained in this document, including, but not limited to, the implied warranties of merchantability and fitness for purpose.

Living Earth Crafts® shall not be liable for incidental or consequential damages in connection with or arising out of the product, performance, or use of this document and the information and material it describes.

Introduction

Congratulations on your purchase of the Napa La Mer spa treatment table. The Napa La Mer offers a practical combination of wet room functionality as well as massage and bodywork, all on one comfortable cushioned table top. It is also well-suited for open-air environments.

Napa La Mer tables are designed for licensed therapists and are intended to be used in a professional spa, massage studio, or similar commercial environment. While no special training is needed to operate the table, for safety reasons it is important that the instructions contained in this manual are reviewed in detail before the first use. This manual should be read in its entirety by each professional who will be operating the table to ensure the safety of both operator and client. This manual should be saved for future reference.

The Napa La Mer table should not be used in any other manner than described in this manual. Please read, understand, and follow all safety warnings, labels, and instructions. Misuse, use of unnecessary force, or using the product for unintended or unauthorized procedures can result in injury to operator, client, and/or equipment.

Detailed instructions for use and maintenance can be found in this user manual. If you have further questions, please contact us at (800) 872-0560 for US customers, or (760) 597-2155 for international customers. We can also be reached via e-mail at info@livingearthcrafts.com

Table of Contents

Section 1: Safety Information

Safety Symbols	2
Warnings	2-3

Section 2: Product Overview

Product Photos	4
Product Specifications	4

Section 3: Installation

Moving Your Table	5
Leveling Instructions	5
Weight Capacity	5

Section 4: Operating Instructions

Pneumatic Height Adjustment	6
-----------------------------------	---

Section 5: Care & Maintenance

Removing Table Cover/Cushion	7
Hydraulic System Maintenance	7
Cleaning & Ongoing Maintenance	8
Troubleshooting	9
Warranty Information	9
Contact Us	back cover

SECTION 1: SAFETY INFORMATION

Safety Symbols

Familiarize yourself with the following Safety & Warning symbols. They are designed to prevent damage and injury to you, your clients, and your new Living Earth Crafts product.

IMPORTANT: The important safety instructions and warnings in this manual cannot cover all possible problems and conditions that can occur. Use common sense and caution when installing, operating, or maintaining this appliance.



Indicates an imminently hazardous situation which could result in serious or fatal injury.



Indicates a potentially hazardous situation which could result in serious injury.



Indicates a potentially hazardous situation which could result in equipment damage and/or injury.

IMPORTANT SAFETY INSTRUCTIONS - FOR COMMERCIAL USE ONLY

Read all instructions before using this product.

WARNING

To reduce the risk of injury to persons:

- 1) Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 2) Do not operate this equipment unless properly trained.
- 3) Install this furnishing in treatment area not accessible to the public.
- 4) Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
- 5) This product does not have "pinch point" protection. Only operate when no possibility of any portion of the body could be caught and injured while moving the table top upward/downward, or activating the back/foot tilt.
- 6) Do not use this furnishing to support video equipment such as televisions or computer monitors.
- 7) Never attempt to use the Head or Leg lift section to support concentrated weight such as sitting or standing

CAUTION


1) When lowering any section of the table, make sure that no supplies or any part of yours or your client's body is between the top of your table and its base. This could result in injury, or could damage your table as well as the item. It is recommended that you always return your table top to the lowest flat position to avoid leaving the base exposed.

- 2) When lowering the table height, be sure there are no foreign obstacles underneath your table that could obstruct it from lowering completely. This could damage your table.
- 3) Never set anything under the table frame to avoid collision if lowered.
- 4) Never operate your table on an uneven surface. Adjust the leveling feet so that your table is stable.
- 5) Never raise the head or leg section with a client in the prone position (face down.)
- 6) Never use or store your table in a wet or very humid environment. Water and excessive moisture can damage the wood cabinet. Evidence of exposure to water or moisture will void your warranty.
- 7) Never drop or insert any object into any opening.


SECTION 1: SAFETY INFORMATION

WARNING

Always use extreme caution when making any position adjustments to your table. Ensure all body parts and objects are clear from all moving parts. The described adjustments can be done with a client on the table, but use caution to ensure that the client's weight is supported while positioning the table section(s).

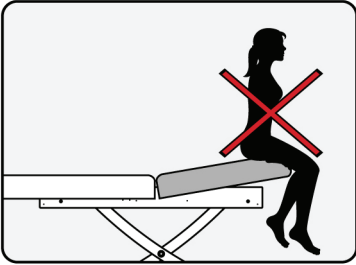

Do not sit or put unnecessary amounts of pressure on the back section of the table when it is in tilt position of any level. This can damage or destroy the tilt mechanism and cause harm or bodily injury to persons. The tilt mechanism is intended solely to be used when a client is properly seated or laying on the table top. Damage caused in this manner may void the warranty.

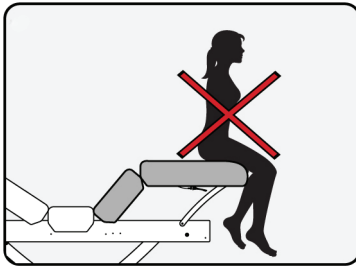


Do not sit or put unnecessary amounts of pressure on the leg section of the table when it is in tilt position of any level. This can damage or destroy the tilt mechanism and cause harm or bodily injury to persons. The tilt mechanism is intended solely to be used when a client is properly seated or laying on the table top. Damage caused in this manner may void the warranty.

CAUTION

DO NOT store or place anything under the backrest - this can damage the top and/or tilting mechanism. This area is not designed for storage or as an area to hold accessories and/or massage supplies while performing any type of service. Placing anything in this area can cause damage to the table and/or object and will void your warranty.

SECTION 2: PRODUCT OVERVIEW

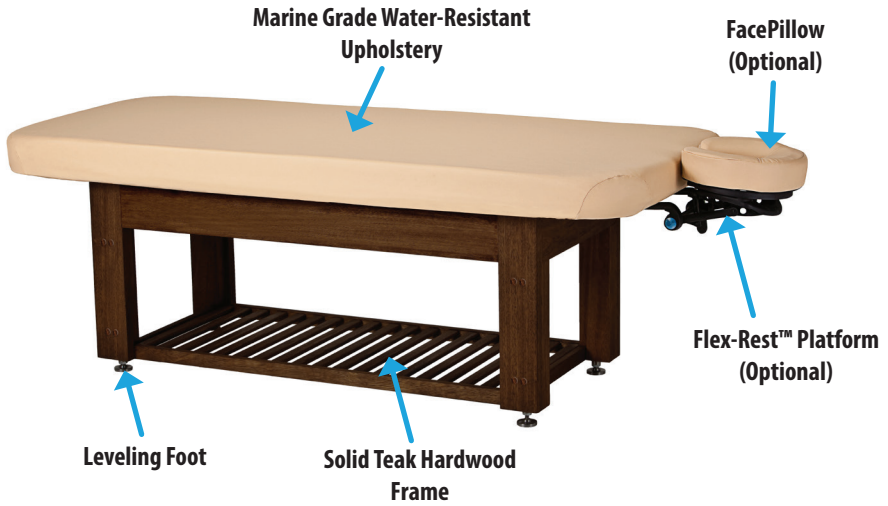

Product Specifications

Top Length	70" (178 cm)
Top Width	29" (74 cm)
Height Range	25" - 37" (64 cm - 94 cm)
Lift Capacity	500 lbs (227 kg)

Included Features

Feature	Standard	Optional
Teak Hardwood Frame	X	
Marine Grade Water-Resistant Upholstery	X	
Marine Grade Aquafoam™ Cushioning	X	
Manual Hydraulic Lift System	X	
Stainless Steel Hardware	X	
Wet Bolster		X
Splash Drape		X
Caress or Flex-Rest Platform		X

SECTION 3: INSTALLATION

Your Napa La Mer table comes completely assembled and ready to use. Once the table is unpacked, follow the “Moving Your Table” instructions below.

Moving Your Table



Always use caution when moving your table - always use proper safety procedures/equipment.




Lift your table by grasping firmly from the bottom of the frame underneath the upholstered top. Do not try to lift from the upholstered top.

Leveling Your Table

Leveling, or balancing, your table is very important during initial setup and routine maintenance. Your table is equipped with leveling feet that can adjust to uneven floors.

To adjust the leveler feet:

1. Place the table in the position you plan to use it.
2. To determine which foot needs adjusting, attempt to “rock” your table. If there is any movement, the leg that is lifting is the one that will need adjusting.
3. Raise table height approximately 6 inches.
4. Using your hand, or a wrench if necessary, turn the leveling foot in the needed direction. (Counterclockwise will lower the overall height, clockwise will raise the overall height)

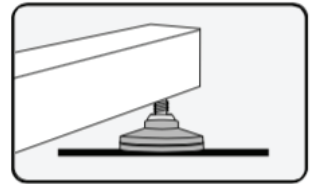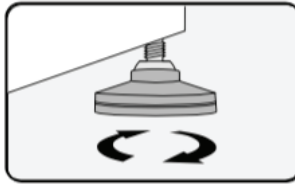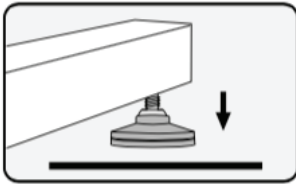

Weight Capacity

500 lbs.

The Napa La Mer is powered by a manual hydraulic lift system. The recommended weight capacity is 500 lbs.

SECTION 4: OPERATING INSTRUCTIONS

Height Adjustment

Raise table height: Turn handle clockwise

Lower table height: Turn handle counter-clockwise

Note: Use caution when making any height adjustments with client on the table

To store handle, see instructions below:



Pull handle outwards




Fold in to store handle

SECTION 5: CARE & MAINTENANCE

Removing Table Cover/Cushion

It is recommended that you place the removable cushion from your table in a place where it can air out on a daily basis. Simply remove the cover and cushion from the table and rest the cushion on its side. See next page for detailed cleaning instructions.

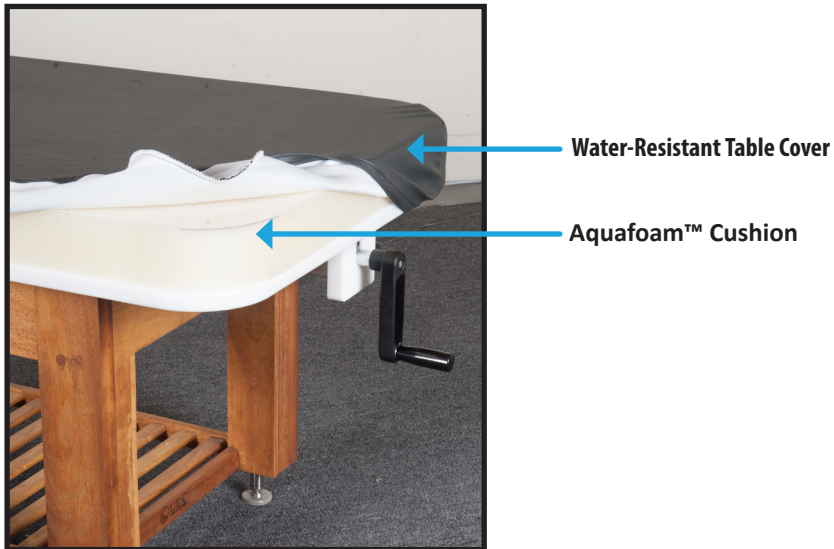

Water-Resistant Table Cover

Aquafoam™ Cushion

Hydraulic System Maintenance

The stainless steel legs should be cleaned and lubricated often - this will help to maintain smooth raising and lowering of your table. This should be done at least every 3 months or more depending on frequency of use.

Cleaning Instructions:

1. Raise the table to its highest height position.
2. Spray WD-40 (or similar petroleum-based lubricant) on the legs, then use a lint-free cloth to wipe the legs from top to bottom several times.
3. Check to see if any foreign material is stuck on surface. If needed, spray a thicker application of WD-40 and leave for several minutes to help loosen most common debris/materials. Wipe clean.

Lubrication Instructions:

1. Raise table to its highest position.
2. Using silicone grease, lubricate well on the exposed legs.
3. Raise and lower the table 2-3 times to distribute the lubricant.
4. Wipe off excess at leg bottom.

SECTION 5: CARE & MAINTENANCE

Cleaning & Ongoing Maintenance



DO NOT USE acetone, "Armor All" type cleaners, citrus-based cleaners, or industrial cleaners. These can seriously damage the upholstery. Such damage would not be covered under warranty.

With proper maintenance, your table is designed to give you years of trouble-free operation. To ensure your table will continue to function properly and keep its appearance, we recommend the following.

Category	Care Recommendation
Upholstery	<p>Remove day-to-day dirt and smudges with a mild soap and water solution. For tough stains and to disinfect, use a (100 to 1) water to bleach solution. Spray a damp cloth with the solution to clean.</p> <p>After each cleaning, gently wipe the upholstery with a damp cloth and clean water, then allow upholstery to air dry before using or storing.</p> <p>For more difficult stains, please contact your dealer or please call us directly for guidance. For best results, use only the products suggested above.xZ</p>
Foam	See previous page for foam maintenance instructions.
Teak Frame	<p>Teak does not require any special maintenance other than an occasional cleaning. If left to age naturally, the wood will gradually change to a soft silvery-grey. We recommend that you maintain the silver patina with regular, gentle cleaning with soft-soap flakes dissolved in warm water (not detergent). Be sure to use a non-abrasive brush or sponge when cleaning, and avoid using steel wool or wire brushes. When finished, rinse the entire piece of furniture with low-pressure water to remove any dirt or remaining solution.</p> <p>Treating teak with oils is not necessary for protection, and will not extend the life of your furniture. However, if you prefer to keep your teak furniture at its original golden color instead of letting it weather to a silvery-gray patina, use a high quality teak wood protector or conditioner. For stained or dirty teak, use a cleaner specifically designed for teak wood.</p>
Hydraulic System	See previous page for detailed instructions.
Leveling Feet	Regularly check to ensure the table is level and stable. See page 5 for leveling instructions.

SECTION 5: CARE & MAINTENANCE

Troubleshooting

This helpful troubleshooting guide will provide you with information about how to recognize a problem with your table, determine possible causes, and find a solution.

In the event your specific situation is not covered in this guide, please contact Living Earth Crafts so our technical support department can assist you. Beyond the troubleshooting guide below, do not attempt to repair the table yourself. This can void your warranty.

Unauthorized service will not be covered. Please be sure to contact Living Earth Crafts Customer Service first at (800) 358-8292, (760) 597-2155 Int'l.

Issue	Solution
The table is not raising or lowering smoothly	The hydraulic system may need to be cleaned/lubricated. See page 7 for instructions.
The table does not raise or lower evenly	The hydraulic system may need repair. Do not attempt to repair it. Call Living Earth Crafts customer service.

Warranty Information

Living Earth Crafts (LEC) offers an industry best warranty against defects in materials, design, and workmanship, to the original owner, as follows:

- Frame - limited lifetime warranty*
- Foam and upholstery covering - warranted for three (3) years
- Motors, controls, electronics - warranted for two (2) years, including parts and labor
- Accessories and options - warranted for one (1) year, unless otherwise noted

LEC may repair or replace defective components at our discretion. LEC will return the warranted product, standard shipping pre-paid, to customers in the continental US. International customers are responsible for any applicable duties and taxes, as well as all shipping charges inbound and outbound. Normal wear and tear, and costs associated with maintenance procedures, and damage caused by accident, misuse, improper maintenance, harsh operating environments or neglect (which includes tears in the upholstery and damage caused by harsh chemical-based cleaners) are not covered under this warranty. All warranties are limited to repair or replacement, at LEC's discretion, unless otherwise stated.

*Lifetime warranty applies to the original owner, as long as you own your table for 5 years after the model is discontinued, or 5 years for private label tables.



Contact Us

Living Earth Crafts
990 Joshua Way
Vista, CA. 92081
(800) 358-8292
(760) 597-2155 Int'l
(866) 449-8872 fax
info@livingearthcrafts.com

Hours of operation:
Monday - Friday
8:00 a.m. to 5 p.m. PST
Saturday - Sunday
Closed

Visit us online at: livingearthcrafts.com
Read our blog at: livingearthcrafts.com/blog
Join us on Facebook®

