


INSTALLATION GUIDE		
RESEARCH POWErStep		
APPLICATION	YEAR	AMP PART#
Jeep Grand Cherokee	2018–2019	76334-01A
		INSTALLATION TIME 3-5 Hours Professional installation recommended SKILL LEVEL (1) (2) (3) (4) 4= Experienced
<u>Fits these trim models:</u> 75th Anniversary Laredo Laredo E Altitude Limited	<u>Does not fit these models:</u> High altitude SRT SRT Red Vapor Summit Summit CA Ed.	 3/16" Hex Key (allen wrench) 1/8", 9/32", and 17/32" Drill Bit Center Punch Anti Corrosion Paint Electrical Tape Utility Knife Small flat blade screwdriver Heat gun Silicon Spray or equivalent Drill
Overland <u>Fits 4 x 2 and 4 x 4</u> Does not fit vehicles with gas tank skid plates, but does fit with front skid plates. AMP RESEARCH TECH SUPPORT 1-888-983-2204 (Press 2) Monday		WARRANTY 5-Year Limited Warranty y - Friday, 7:00 AM - 5:00 PM PST
Invented, engineered and manufactured exclusively by AMP Research in the USA. May be covered by one of the following patents: 6,641,158; 6,830,257; 6,834,875; 6,938,909; 7,055,839; 7,380,807; 7,398,985; 7,584,975 ©2012 AMP Research. All rights reserved. Printed in USA.		
www.amp-research.com	1/13	IM76334 rev 07.30.19

I

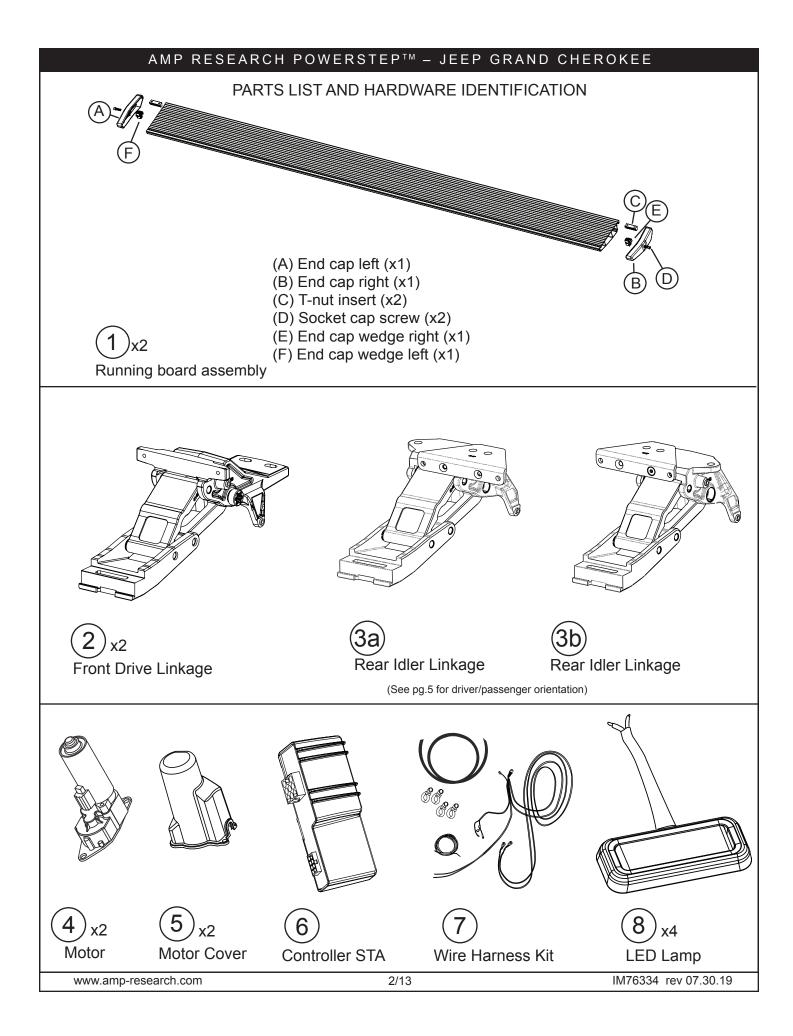

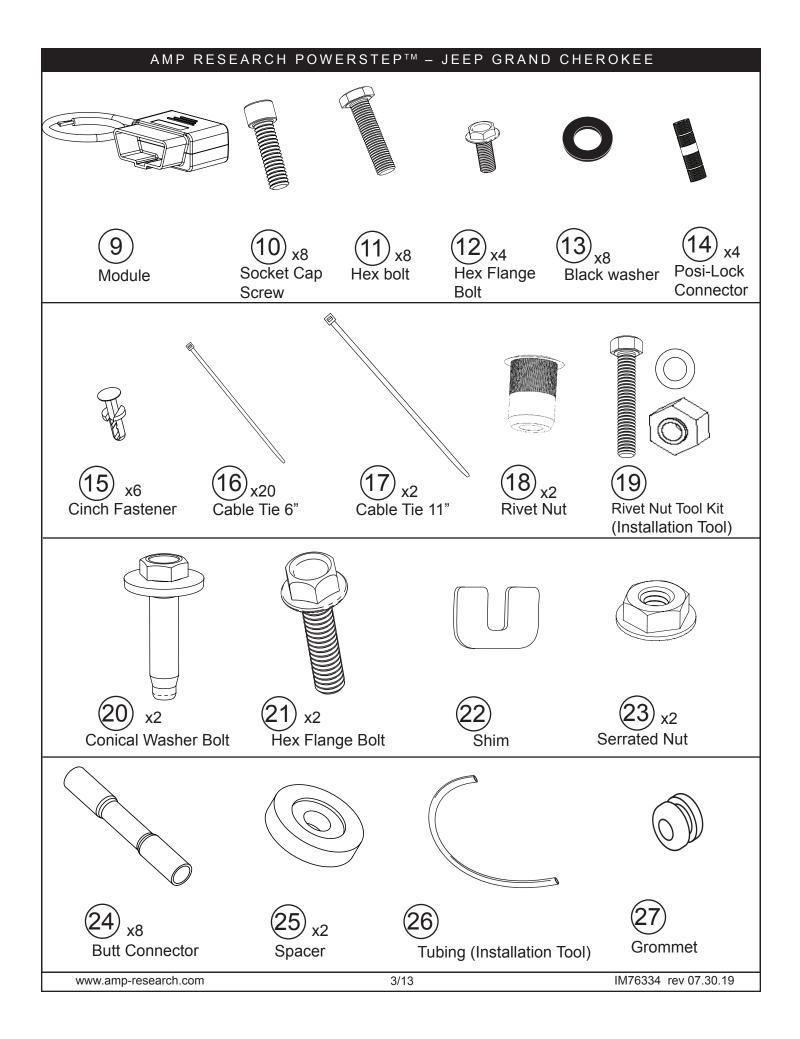


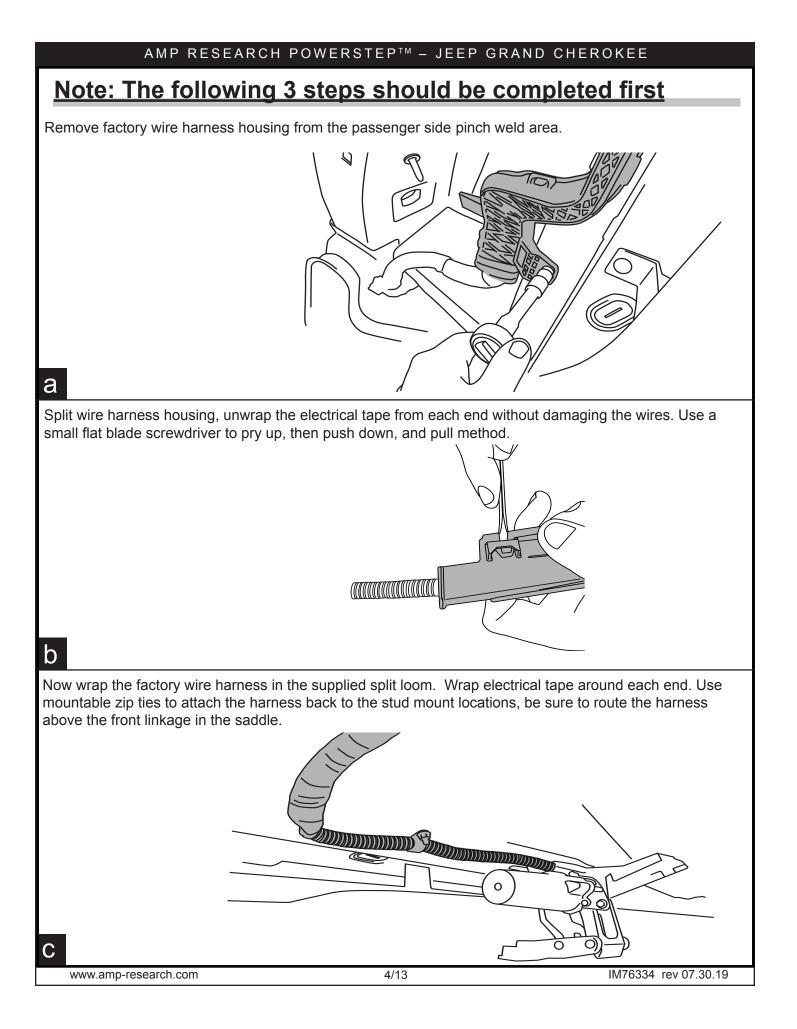

AMP RESEARCH POWERSTEP™ - JEEP GRAND CHEROKEE

Installing Linkages

When installing linkages, use the second and fourth set of bolt holes on the pinch weld (see below).

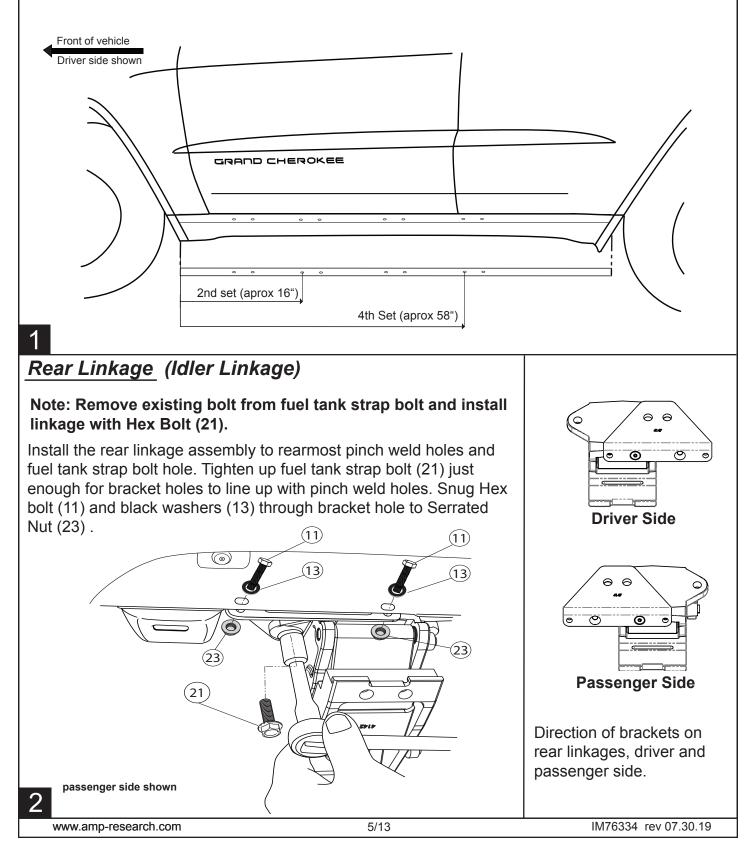

AMP RESEARCH POWERSTEP[™] - JEEP GRAND CHEROKEE

Front Linkage (Motor Linkage)


3

5

bolts.

nut tool bag,

Before installing motor to front linkage, mount linkage to the second set of holes of the pinch weld from the front of the vehicle, use two Hex bolts (11) and two black washers (13).

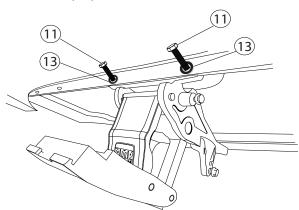

Pre Drill hole at center of slot marking with an 1/8"


Drill and then drill to 17/32". Then insert the rivet


Warning: Rivet nuts not properly collapsed will

not hold securely to sheet metal.

Reinstall front linkage just snug, using the 2 Hex

Mark the center of the forward most slot for the rivet nut hole. Once done then remove linkage.

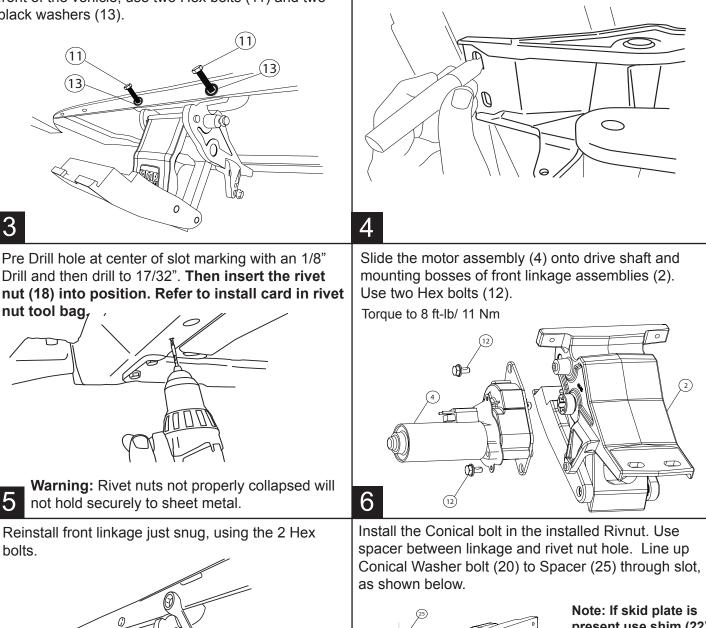

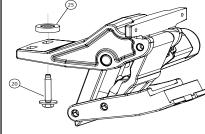

present use shim (22) under skid plate, instead of spacer (25).



Repeat steps 1 through 8 on the other side. Use forward most hole for marking Rivet Nut location.


8

AMP RESEARCH POWERSTEP[™] - JEEP GRAND CHEROKEE

Installing Electrical Components


Remove the fuse from the Powerstep wire harness.

Route the long wire harness leg along the top of the firewall and then down away from the steering shaft and exhaust to sub frame then back to pinch weld area. The other leg shall go along the Fuse box, then down away from the exhaust and to the pinch weld area. Zip tie as needed.

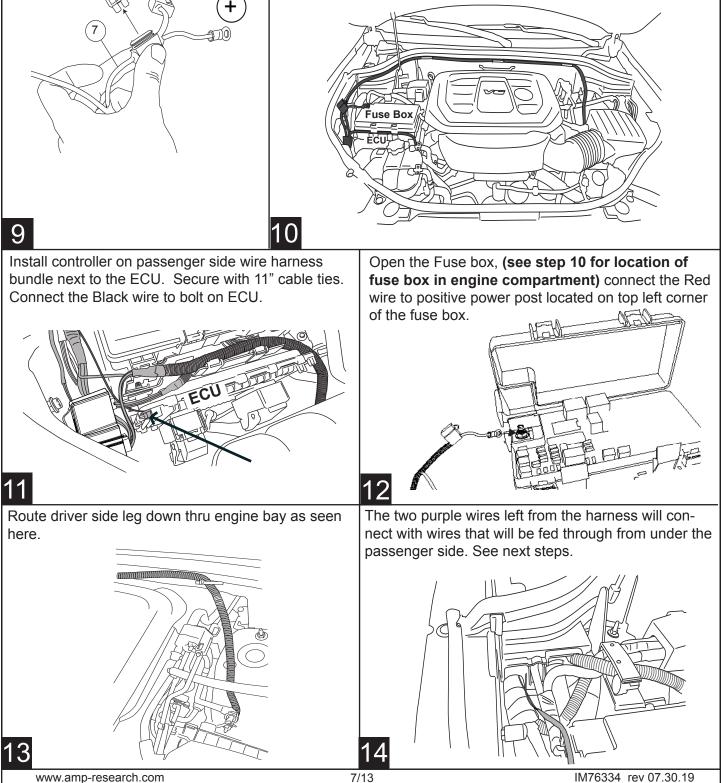


www.amp-research.com

AMP RESEARCH POWERSTEP™ - JEEP GRAND CHEROKEE

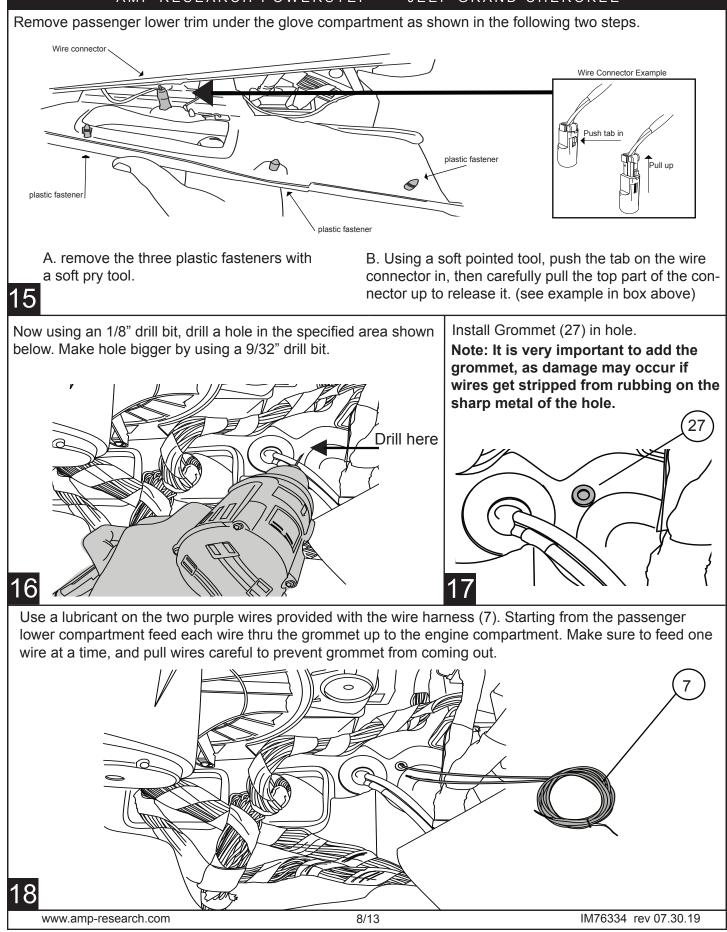


AMP RESEARCH POWERSTEP™ - JEEP GRAND CHEROKEE Now, feed the tube (26) thru the lower/center of the Connect the two purple wires coming from under the dash. passenger side to the two wires in the engine compartment. Use Posi locks to connect them. Note: Connect the matching wire color/stripe. 14 19 20 Keep wires away AC/Heater Tube Pull down carpet on dash lower/center on the driver side and pull the tube through from passenger side. Note: When feeding tube thru, make sure to position it under existing wire harness (see picture) to keep the wires away from the silver AC/Heater tubing as that part may get hot and cause damage to wires. Once the tube is fed thru, feed both purple wires thru the tubing tool. The tube can now be pulled off. 21

Feed wires thru the under dash cover as shown to keep wires tucked up out of the way. Connect the OBD II plug to the trigger wires with Posi Lock Connector (14). **Connect the matching wire color/stripe.** Next, remove side access panel and connect 2 pin plug on OBD Harness into white bank of open ports as shown

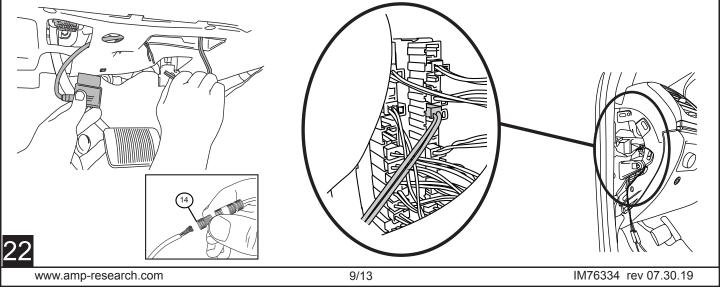


AMP RESEARCH POWERSTEP[™] - JEEP GRAND CHEROKEE

OBD II install: Use Supplied Posi Twist connectors to attach the Plug and Play Module to the Harness. Attach matching colors on the harness to the wires on the module. Plug in module to OBD II port on the vehicle. Secure harness with supplied tie wraps. *Note: If the OBD II pass thru harness (76404-01A) was purchased see install sheet supplied in packaging. The pass through harness allows for an open port for other accessories. See below for a brief description.*

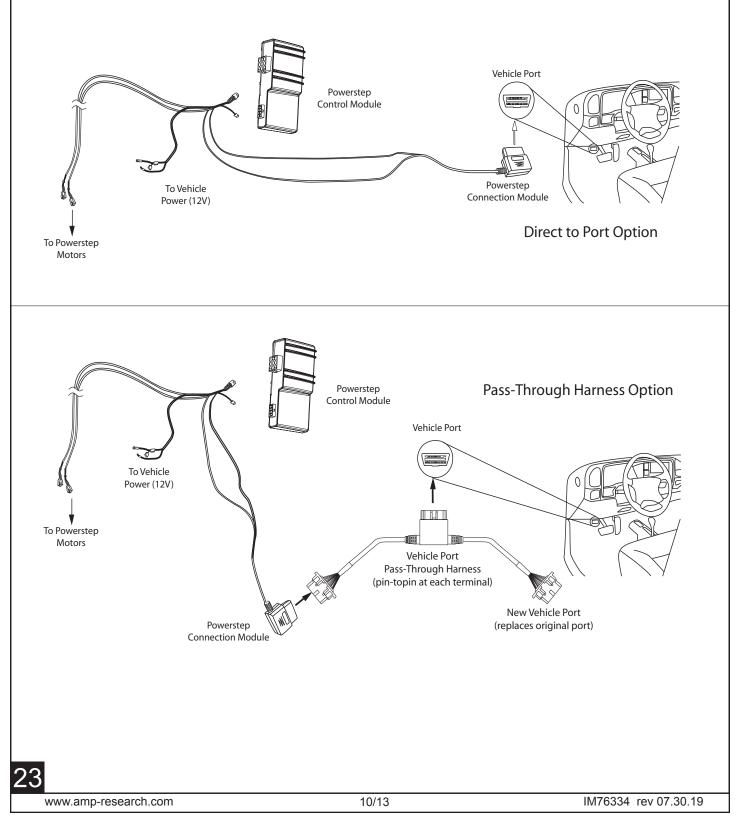


AMP RESEARCH POWERSTEP™ - JEEP GRAND CHEROKEE

Insert plug from wire harness (7) onto motor (4). Slide rubber grommet on wire harness into slot of motor cover (5). Insert motor cover onto motor. Use electrical tape to cover any exposed wire from the motor.

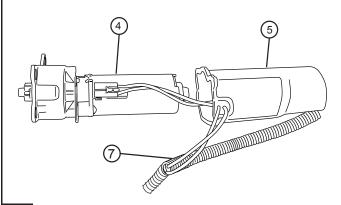



Insert plastic push pin rivets (15) in mounting holes of motor cover(5). Use pliers to ease installation.

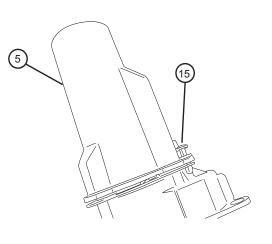

24


On each side of the vehicle Secure the LED light (8) onto the rocker just behind the front linkages and in front of the rear linkages. Make sure lamp is affixed to a flat, clean surface.

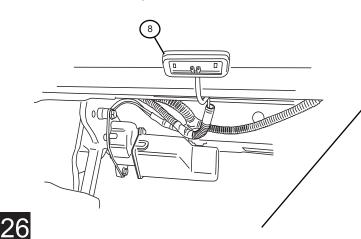


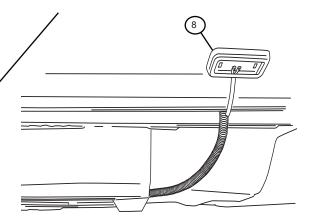


Use supplied butt connectors (24), connect the lamp wires. Red to Red and Black to Black. **Once crimped use heat gun to shrink tube**. The wires about the start tipe accordingly.

Close and wrap with conduit and electrical tape. Secure all loose wires with cable ties, with lamp wires pulled upward to avoid any wire snagging.

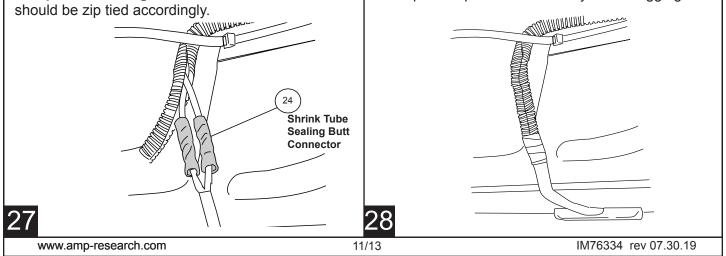


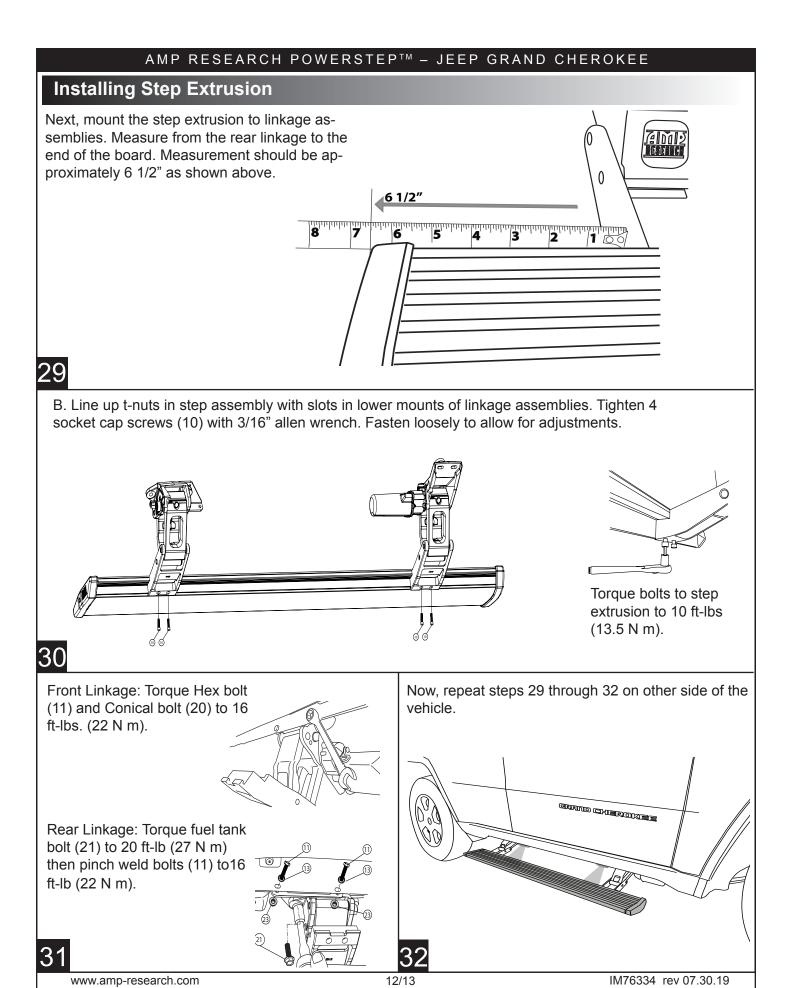

AMP RESEARCH POWERSTEPTM – JEEP GRAND CHEROKEE

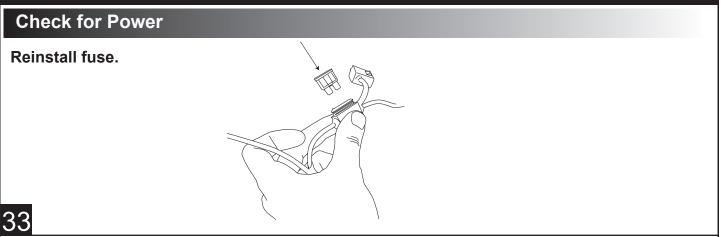

Check that all doors activate the Power Step and the LED Lights work when doors open and close. Reinstall any remaining trim panels.

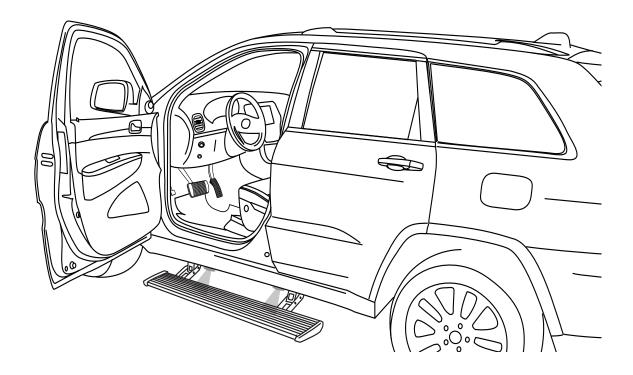

FINAL SYSTEM CHECK

Check that all doors activate the PowerStep and the LED lights work when doors open and close. **NORMAL OPERATION:** When the doors open, PowerStep automatically deploys from under the vehicle. When the doors are closed, PowerStep will automatically return to the stowed/retracted position. *Note that there is a 2-second delay before the PowerStep returns to the stowed/retracted position.*

CORRECT OPERATION OF LIGHTS: All four lamps will illuminate upon opening any door of vehicle. Lamps will stay on until restowing of both Power Steps or until 5 minutes has expired with the doors open. When the lights timeout after 5 minutes, they can be reillumintated by closing and opening any door of vehicle.



AMERICAN DESIGNED, ENGINEERED AND MANUFACTURED.

Thank you for your recent AMP Research Purchase.

REGISTER YOUR PRODUCT TODAY FOR FASTER SERVICE & PRODUCT UPDATES

Please visit:

www.amp-research.com/productregistration or scan the QR Code



Product Registration Benefits:

• Ensure we have your purchase receipt and product info in our system which is required for warranty

• Faster and easier access to customer service and tech support in the unlikely event you need warranty or product support

Registration helps us keep you up to date on product information and offers

To view other Amp Research products that may be offered for your vehicle. **Please visit: www.amp-research.com**Rev 01.05.21

RESERRCH POWEr Step

Congratulations on your purchase of the genuine AMP Research PowerStep! Here's what you should know...

POWER-DEPLOYABLE RUNNING BOARDS OPERATION: AMP Research PowerStep running boards automatically move when the doors are opened to assist entering and exiting the vehicle.



Automatic power deploy:

The running boards will extend down and out when the doors are opened.

Automatic power stow:

The running boards will return to the stowed position when the doors are closed. There will be a 2-second delay before the running boards move to the stowed position.

Automatic stop:

If an object is in the way of the moving running board, the running board will automatically stop. To reset, clear any obstruction, then simply open and close the door to resume normal operation.



Manually set in the deployed (OUT) position for access to the roof:

The running boards can be manually set in the deployed position by firmly holding the step down with your foot while at the same time closing the door. To resume normal operation, open and close the door.



Maintenance: In adverse conditions, debris such as mud, dirt, and salt may become trapped in the running board mechanism, possibly leading to unwanted noise. If this occurs, manually set the running boards to the deployed position and flush the front and rear hinge arms with a high-pressure car wash wand. <u>Avoid spraying the motors directly.</u> After washing, apply silicone spray lubricant to the hinge pivot pins. Do not apply silicone, wax or protectants like Armor All[®] to the running board stepping surface.

Caution! Keep hands away when the running board is in motion.

5-YEAR LIMITED WARRANTY

AMP RESEARCH warrants this product to be free from defects in material and workmanship for FIVE (5) YEARS FROM DATE OF PURCHASE, provided there has been normal use and proper maintenance. This warranty applies to the original purchaser only. All remedies under this warranty are limited to the repair replacement of the product itself, or the repair or replacement of any component part thereof, found by the factory to be defective within the time period specified. The decision to repair or replace is wholly within the discretion of the manufacturer.

This warranty specifically excludes labor. If you have a warranty claim, first you must call our factory at the number below for instructions. You must retain proof of purchase and submit a copy with any items returned for warranty work. Upon completion of warranty work, if any, we will return the repaired or replaced item or items to you freight prepaid. Damage to our products caused by accidents, fire, vandalism, negligence, misinstallation, misuse, Acts of God, or by defective parts not manufactured by us, is not covered under this warranty.

ANY IMPLIED WARRANTIES OF MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE CREATED HEREBY ARE LIMITED IN DURATION TO THE SAME DURATION AND SCOPE AS THE EXPRESS WRITTEN WARRANTY. OUR COMPANY SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGE.

Some states do not allow limitations on how long an implied warranty lasts, or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

FOR WARRANTY ISSUES WITH THIS PRODUCT PLEASE CALL AMP RESEARCH CUSTOMER SERVICE 1-888-983-2204

WARNING

Be sure to read and precisely follow the provided instructions when installing this product. Failure to do so could place the vehicle occupants in a potentially dangerous situation. After installing or reinstalling, re-check to insure that the product is properly installed.