
Pressure Relief 3 Port Valve: (V)

With the use of a 3-port valve for residual pressure release, pressure left in the line can be easily exhausted.

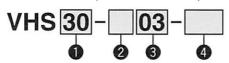

• Semi-standard: Select one each for a to b.

Thread type


· Semi-standard symbol: When more than one specification is required, indicate in alphabetic order. Example) VHS30-03-RZ

Symbol

N Note)

F Note)

01

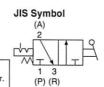

Body size

40

30

20



E	\$\frac{1}{2}\frac{1}{2

Lockable at the

time of exhaust

		02	1/4	•	•		-
Dort size		03	3/8	I -		•	_
Port	size	04	1/2	_	_		_
		06	3/4	_	-		
		10	1	I -	-	1	
		+	•	-			
	Class disastina	Nil	Flow direction: Left to right	0	•		
a	Flow direction	R	Flow direction: Right to left			0	
		+					
-	December out	Nil	Name plate in imperial units: MPa			•	
D	Pressure unit	Z Note)	Name plate in imperial units: psi				
	Port a b		Port size	Port size	Port size	Port size 03	Port size 03

Description

Rc

NPT

G

1/8

Note) For thread type: NPT only. This product is for overseas use only according to the new Measurement Law. (The SI unit type is provided for use in Japan.)


Specifications

0

4

Model	Port :	size	Effective area (mm²) (): Cv factor			
Model	IN, OUT	EXH	IN→OUT	OUT→EXH		
VHS20	1/8	1/8	10 (0.54)	11 (0.60)		
VH520	1/4	1/0	14 (0.76)	16 (0.87)		
VHS30	1/4	1/4	16 (0.87)	14 (0.76)		
V11330	3/8	1/4	31 (1.68)	29 (1.57)		
	1/4		27 (1.46)	36 (1.95)		
VHS40	3/8	3/8	38 (2.06)	40 (2.17)		
	1/2		55 (2.98)	42 (2.28)		
VHS40-06	3/4	1/2	77 (1.73)	49 (2.66)		
VHS50	3/4	1/2	82 (4.44)	50 (2.71)		
VH350	1	1/2	125 (6.78)	53 (2.87)		

Note) Use an air filter on the IN side for operating protection.

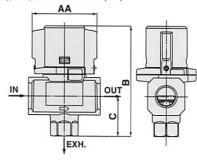

G

Model	Α	AA	В	С	D	E	F	G	Н
VHS20	40	34	59	20	45	33	28	_	45
VHS30	53	46	78	29	55	42	30	_	55
VHS40	70	63	107	39	58	44	36	22	63
VHS40-06	75	67	110	42	65	50	44	21	69
VHS50	90	78	134	53	76	61	54	26	81

Caution on Mounting

1.	If a tube, stop valve or silencer is connected to the ex-							
	haust port of the VHS20/30, the effective sectional							
	area should be larger than the figure indicated in the							
	following table, to prevent malfunction caused by back							
	proceure (This is not applicable to the VHS40/50.)							

Model	Effective area (mm²)
VHS20	5
VHS30	5

Cross Spacer: M5 x 0.8, 1/8, 1/4, 3/8, 1/2

Pipings are possible in all 4 directions.

IN/OUT ports are not machined for threads.


Please contact SMC if threaded (machined) ports are required.



Caution on Mounting

- 1. When mounting a cross interface directly on the IN side of the lubricator, be sure to
- use the AKM series check valve between the lubricator and cross interface.

 2. Factory mounting of a cross interface on the AC model is available as a special

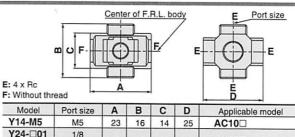

Model	Port size	Α	В	С	D	Applicable model	
Y14-M5	M5	23	16	14	25	AC10□	
Y24-□01	1/8	40				1000=	
Y24-□02	1/4	40	40	22	40	AC20□	
Y34-□01	1/8						
Y34-□02	1/4	49	43	28	48	AC25□, AC30□	
Y44-□02 1/4		60	48	36	54		
Y44-□03						AC40□	
Y54-□03	754-□03 3/8						
Y54-□04	1/2	72 62 40		62	AC40□-06		

Note 1) ☐ in model numbers indicates a thread type. No indication is necessary for Rc;

however, indicate N for NPT, and F for G.
Note 2) If threaded IN/OUT ports are required, they are available as a special order. Please contact SMC.