
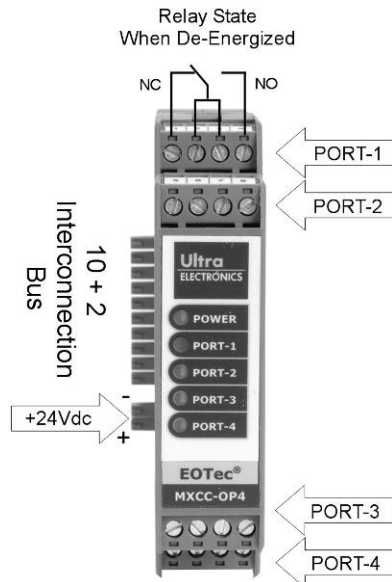


Connections

POWER: The MXCC-OP modules obtain power from the 10+2 interconnection bus. Power originates from an MX Base Module (see specification section).

RELAY OUTPUT: The Port-1 I/O terminal block is at the top-front of the unit. Port-2 is directly below it. On a 4 port model, Port-3 is at the bottom-front of the unit with Port-4 directly below and behind it. Screw terminal blocks are numbered from left-to-right as follows:

PORT	TERMINAL			
PORT-1	1	2	3	4
PORT-2	5	6	7	8
PORT-3	9	10	11	12
PORT-4	13	14	15	16
MXCC-OP Form-C Relay Output	Normally Closed (NC)	Common (Com)	Common (Com)	Normally Open (NO)

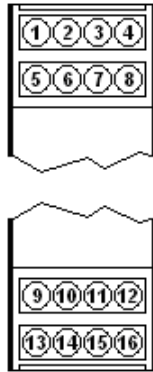

Safety and Warning Information



Connect the DIN Rail, via the Model 2A09 End Clamp, to Protective Earth (PE) ground with low impedance.

ATEX Specific Conditions of Use

Modules shall be installed in an enclosure which maintains an ingress protection rating of IP54 and meets the enclosure requirements of EN60079-0 and EN60079-15. The EOTec modules shall be installed in DIN rail with DIN end clamps mounted on both sides of the module set. The DIN rail must be connected to Protective Earth in order to provide modules with a Protective Earth connection. Do not disconnect equipment connections or modules when energized.

Important Notice - Before utilizing the product, the user should determine the suitability of the product for its intended use. The user assumes all risk and liability in connection with such use. ULTRA ELECTRONICS' WRITTEN WARRANTY FOR THE PRODUCT IS MADE IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. The user's exclusive remedy for breach of Ultra Electronics' written warranty shall be the repair or replacement of such quantity of product which is proven to be defective. In no case shall Ultra Electronics be liable for any special, incidental, or consequential damages based upon breach of contract, negligence, strict liability or other legal theory.

Ultra Electronics

NUCLEAR SENSORS & PROCESS INSTRUMENTATION

707 Jeffery Way, PO Box 300
Round Rock, TX 78680-300 USA

Toll Free: 800-880-9333
Telephone: +1 512-434-2850
Fax: +1 512-434-2901

Email: fiberop@ultra-nspi.com
www.ultra-nspi.com

Ultra Electronics, Nuclear sensors & Process Instrumentation is a business name of Weed Instrument Co.. Inc.

Approval Agency Controlled Document
No changes authorized without prior agency approval

Publication Number:

RM0900209 Rev. 0

Ultra
ELECTRONICS

Nuclear Sensors &
Process Instrumentation

EOTec MX Multiplexer Models

MXCC-OP2 / MXCC-OP4

2 & 4 Port Contact Closure
Output Modules

Installation Instructions *Original Instructions*



MX Contact Closure Input Modules

For use **ONLY** with the
EOTec MX Multiplexer Line

Operation & Installation

Description: Contact Closure, Relay Output Modules, Models MXCC-OP2 and MXCC-OP4, are designed to provide two and four channels of relay (dry contact, Form-C, SPDT) output signal. The input signals from a mated MXCC-IP2 or MXCC-IP4 Contact Closure Input Module are passed to the MX Base Module where they are multiplexed and converted to a fiber optic signal. The MX Base Module at the output end of the fiber link de-multiplexes the signals and passes them to a Model MXCC-OP2 and MXCC-OP4, for conversion to a Form-C (SPDT) relay output format.

Assembly: Place the top lip of the module's mounting channel onto the DIN rail. Push the lower portion of the module towards the mounting surface until it "clicks" and locks into place. Firmly slide the modules together such that the module sides are touching ensuring a good connection of the 10+2 integrated BUS interconnection at the rear of the modules. Install End Clamps (Model 2A09) to both sides of the module bundle to prevent accidental unplugging of the BUS interconnections. The End Clamps can provide convenient screw terminals for connecting the DIN rail to Protective Earth (PE) ground.


Dismantle: Remove the End Clamps from the DIN rail. Disconnect the BUS interconnections by sliding the modules at least 1/2" apart from each other. Insert a screwdriver into the rectangular hole in the metal mounting latch at the bottom of the module. Pushing up on the screwdriver's handle causes the latch to move downward and disengages it from the DIN rail. Tilt the module up and lift it off of the DIN rail.

Service

Service of this equipment is to be performed by Ultra Electronics, NSPI only. This unit has no scheduled replacement of parts. For installation manuals in a community language other than English please contact Ultra Electronics, NSPI.

Settings & Indicators

Use a small screwdriver to press on the latches (indentations) at the top and bottom of the front housing cover. Slide housing forward to open.

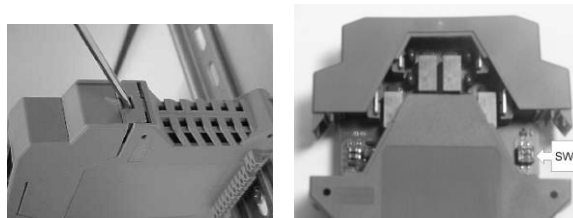

MODULE ADDRESS SETTING: A two position DIP switch, SW1, is used to set the **address** of the module and it must **match** the address of its mating module at the **opposite** end of the fiber link. **Do not** set two modules at the **same** end of the fiber link in one stack to the same address setting. Each module in a stack must have a different address to function properly. The 4 possible address settings are:

Address	SW1-1	SW1-2
00	OFF	OFF
01	OFF	ON
10	ON	OFF
11	ON	ON

LED	Color	Description
Power	Green	Power Applied
	Off	No Power
I/O Ports	Green	Normal Operation
	Off	No Input/Output Data

Regulatory Information

INDUSTRIAL CONTROL EQUIP. FOR HAZ. LOC. CLASS I, DIVISION 2, GROUPS A,B,C, & D, T4

Do not disconnect equipment unless area is known to be non-hazardous. Certified components for use in a suitable enclosure. Substitution of components or other equipment modification may impair suitability. Ambient Temperature: -40 .. 70C Max
Electrical Rating: 24Vdc, 80mA



FM11ATEX0067X
II 3 G Ex nA nC IIC T4 Ta = -40 °C to 70 °C

Specifications

Power Requirements

15 to 30VDC via the interconnection Bus from an MX Base Module (MXB-MM2, MXB-SM15, MXB-SM40 or MXB-SM80)

MXCC-OP2	60mA @ 24Vdc
MXCC-OP4	80mA @ 24Vdc

Connections

Pluggable, Cage Clamp Screw Terminal Blocks, Accept 12 to 24 AWG

MXCC-OP2	2 – Contact Closure Relays
MXCC-OP4	4 – Contact Closure Relays

Update Rate

57.6KHz, independent of number of modules or ports utilized

Output Contact Rating

Max Switching Voltage: 220VDC; 250VAC
Rated Current: 2A Continuous, 2A Switching
Switching Power: 60W, 62.5 VA

Ambient Conditions

-40 to 70°C
0 to 95% Humidity (Non-condensing)

Output Relay Form-C (SPDT)

Mounting 35mm DIN Rail

Weight < 9oz

Enclosure Material Polyamide

Flammability Rating UL 94V-0

Fuse 500mA 125V

Replacement fuses can be purchased from your Schurter distributor. Part number 3403.0163.11