

# BOSS

HIGH AND LOW CHAIR VERSIONS



MADE IN THE EUROPEAN UNION

Classic, elegance and warmth. BOSS is the perfect combination of performance and movement technology, sustainability and sobriety. Its main difference: a sophisticated handcrafted coating that confers its traditional character.

BOSS combines traditional materials and technology to guarantee maximum comfort, a real pleasure for the senses.

Available in high and low versions, BOSS is a reference in the Dile range of directional chairs, with a unique design that exudes character.



#### 

#### BOSS HIGH CHAIR SKU:DIMOLE-401-S0100

### 01.

Monocoque seat Internal steel structure covered with fireproof foam (UNE EN 1021–2/06 / BS-5852/06) of high density polyurethane <sup>--</sup> foam of 60 kg/m<sup>3</sup> (EN ISO 845) with an external layer of fiber.

# **02.** Arms

Fixed in 12 to 15 micron thick chromeplated steel with upholstered polyurethane armrests.

## 04.

Gas column, bases and wheels - Lifting using a class 3 black gas column (UNI 9084/02), tested for users weighing up to 120 kg.

Polished aluminum base 70 cm diameter. This model comes with desmopan double rubberized 50 mm diameter wheels with cromed cover.
The base connection bolt has a circular nylon ring to prevent noise when used on metal or aluminum bases.
Optional: Anti-slip gliders in black nylon.



## 03.

#### Mechanisms

Advanced tilting

The swivel axis is moved forward, which means that when the mechanism is released (very distinguishable by its Z-shape), the foot contact with the floor remains undisturbed.

- It has the following features:
- 5 locking positions with non-return function.
- Particularly fluid and ergonomic movement.
- Up to 14° of seat oscillation.



#### 



#### 01.

Monocoque seat Internal steel structure covered with fireproof foam (UNE EN 1021-2/06 / BS-5852/06) of high density polyurethane foam of 60 kg/m<sup>3</sup> (EN ISO 845) with an external layer of fiber.

# **02.** Arms

Fixed in 12 to 15 micron thick chromeplated steel with upholstered polyurethane armrests.

## 04.

Gas column, bases and wheels - Lifting using a class 3 black gas column (UNI 9084/02), tested for users weighing up to 120 kg. - Polished aluminum base 70 cm

Potished atuminum base 70 cm
diameter. This model comes with
desmopan double rubberized 50 mm
diameter wheels with cromed cover.
The base connection bolt has a circular
nylon ring to prevent noise when used on
metal or aluminum bases.
Optional: Anti-slip gliders in black
nylon.



#### **03.** Mechanisms

#### Advanced tilting

The swivel axis is moved forward, which means that when the mechanism is released (very distinguishable by its Z-shape), the foot contact with the floor remains undisturbed. It has the following features:

- 5 locking positions with non-return function.
- Particularly fluid and ergonomic movement.
- Up to 14° of seat oscillation.

#### Gas lift


The seat moves up and down by operating a lever on the bottom right of the seat.







#### $\square$

## BOSS **DIMENSIONS**

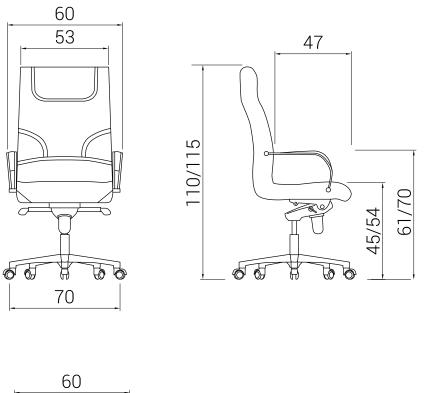

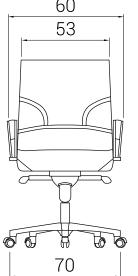

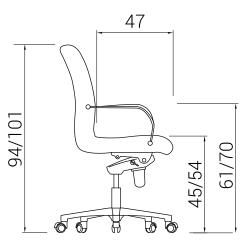

www.mondocontract.com | quotes@mondocontract.com

#### 

## ERGONOMICS

20°

Min distance 55 cm

GOOD POSTURE IS ESSENTIAL TO AVOID HEALTH PROBLEMS

#### 01.

THE INCLINATION OF THE SEAT AND THE BACKREST A synchronized movement of the seat and backrest, configure a very successful solution for long working or study days.

#### 02.

LUMBAR ADJUSTMENT The backrest must provide good support for the entire back and be adapted to the lumbar part. The lumbar adjustment mechanism allows the curvature of the chair to be adjusted according to the curvature of the user's back for better support.

#### 03.

ADJUSTABLE ARMRESTS The forearms should be parallel to the work surface and form a right angle with the arm.

### 04.

THE STRENGTH OF THE SEAT The seat must offer firmness and adaptation to the user's physiognomy.

#### 05.

CHAIR HEIGHT ADJUSTMENT The possibility of adjusting the height allows for the correct posture, with the feet comfortably resting on the floor and the legs in a horizontal position. climate, one fabric or another should be chosen.

07.

FABRIC

## 06.

BASES The base of the chair should have 5 points of support for the wheels on the ground, to facilitate their movement with minimal effort.

Depending on the area of use and

Don't forget to take a break to stretch and move around regularly



# BOSS **FINISHES**

<b>01</b> BALI (G01)	P6	P8	P20	P21	P22	P28	P29	P30
<b>02</b> POLYESTER (G01)	C1	C2	C5	C7	C8	C10	C14	C17
<b>03</b> GOYA (Go1)	D1	D3	D6	D8	D9	D10	D11	D12
<b>04</b> TOUCH LEATHER (G01)	R1	R2	R3	R4 R	5 R6	R7	R8	R9
<b>05</b> COMBI (G01)	B1	B2	B3	B4	B5	B6	B7	B8
06 OCEAN (G02)	G2	G3	G4	G5	G7	G8	G10	G12
<b>07</b> ELASTIKA FR (G02)	12	I3	14	17	I10	I11	I12	114
<b>08</b> ORUGA (G02)	02	04	09			011	012	015
<b>09</b> NIL0 (G02)	NL1	NL7	NL9	NL12	NL15	NL33	NL39	NL43
<b>10</b> MADISON (G02)	MA1	MA3	MA4	MA6	MA12	MA17	MA19	MA20
<b>11</b> TONAL (G02)	T01	TO2	TO3	TO4	T05	T06	T07	T08
<b>12</b> ONE (G02)	ON1	ON2	ON3	ON4	0N5	ON6	0N7	ON8
<b>13</b> VALENCIA (G03)	VA5	VA6	VA11	VA14	VA15	VA16	VA21	VA22
<b>14</b> DEKORA (G03)	DE1	DE2	DE3	DE4	DE5	DE6	DE7	DE8
<b>15</b> FELICITY (G03)	FE1	FE2	FE3	FE4	FE5	FE6	FE7	FE8
16 LEATHER (G04)	F1	F2	F3	<b>F</b> 6	F8	F14	F18	F20

www.mondocontract.com | quotes@mondocontract.com



# BOSS INSTRUCTIONS FOR USE



#### **GAS LIFT**

By lifting the handle we unlock the gas column. Without weight the chair lifts up. With the user seated, the chair goes down. Once the handle is released, the gas column is blocked again.





#### **TENSION ADJUSTMENT OF THE MONOCOQUE SEAT**

Thanks to the tension adjustment knob located below the mechanism, the tension can be adjusted according to the user's weight. Turning the knob clockwise makes the monocoque seat more resistant to the weight of the back. Turning the knob counterclockwise makes the seat less resistant to back weight.





#### ADJUSTING THE TILT OF THE MONOCOQUE SEAT

By raising the lever, the mechanism is released and the monocoque seat tilts under the weight of the back. By lowering the lever, the monocoque seat is locked in the desired position. To unlock it, simply lift the lever and apply weight with your back.

#### $\square \square \square \square \square$

# BOSS ASSEMBLY INSTRUCTIONS

